

CENTURION BIKE SHED x8

BASE INSTRUCTIONS

Flat and firm base. Recommended: concrete, tarmac or paving flags.
Min. distance from walls/ shrubbery: 1000mm.
Min. base size (WxDxH) 4824mm x 1730mm x 50mm.

LEVELING THE UNIT

Correctly level the constructed unit using the shims (ZCOMPPLAS) provided prior to fixing the unit to the ground. Slide the packing pieces under the corners of the unit base as required until an equal gap has been achieved around the door allowing for its smooth operation and alignment.


It is always recommended to anchor the unit to the ground. Drill through the four holes in each of the base of the unit using 6mm dia masonry drill to a depth of 70mm. Screw in the anchor fixings. (These have a self cutting thread). If not anchoring the unit, fit the self seal plugs **BEFORE BUILDING** to seal the fixing holes from underneath. **Please note product must be bolted down to comply with LPS1175.**

TOOLS REQUIRED

Power driver POSI-DRIV screwdriver, 6mm dia. masonry drill and a 10mm socket or spanner.









Warning: some panels may weigh over 20Kg
Beware of manual handling

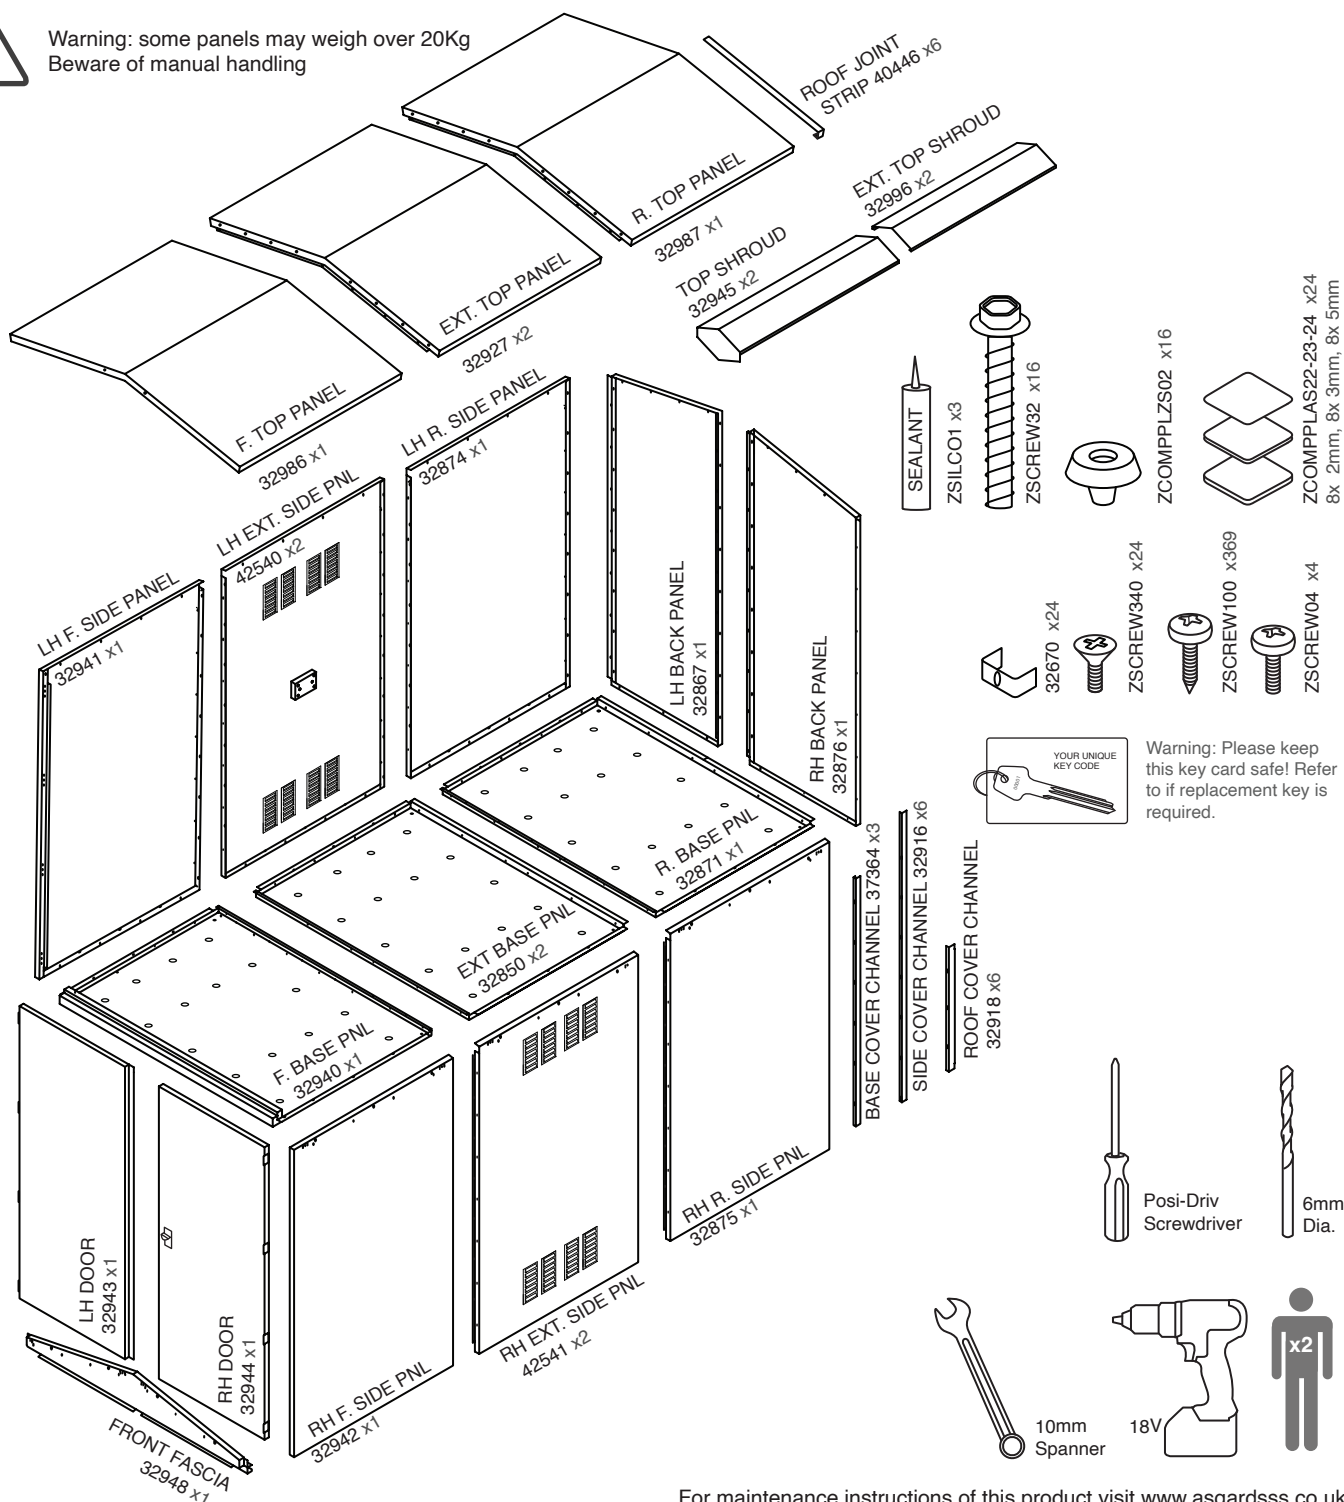


Warning: Please keep this key card safe! Refer to if replacement key is required.

PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE

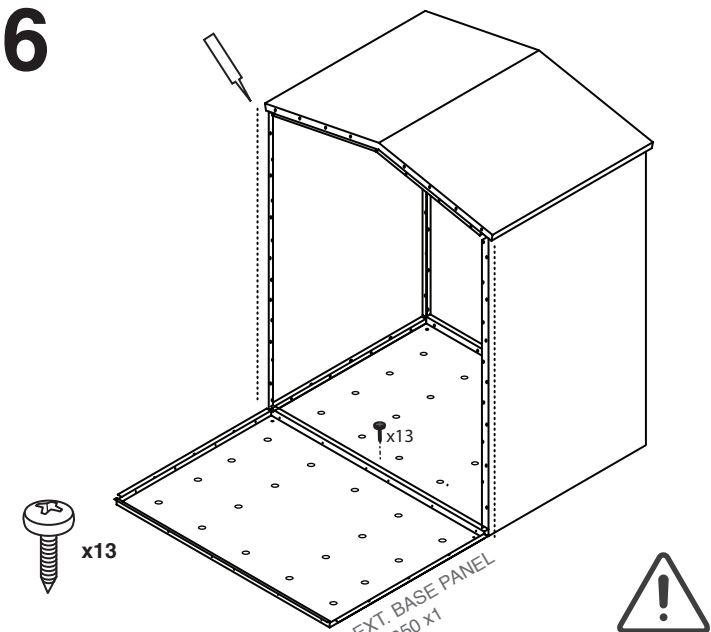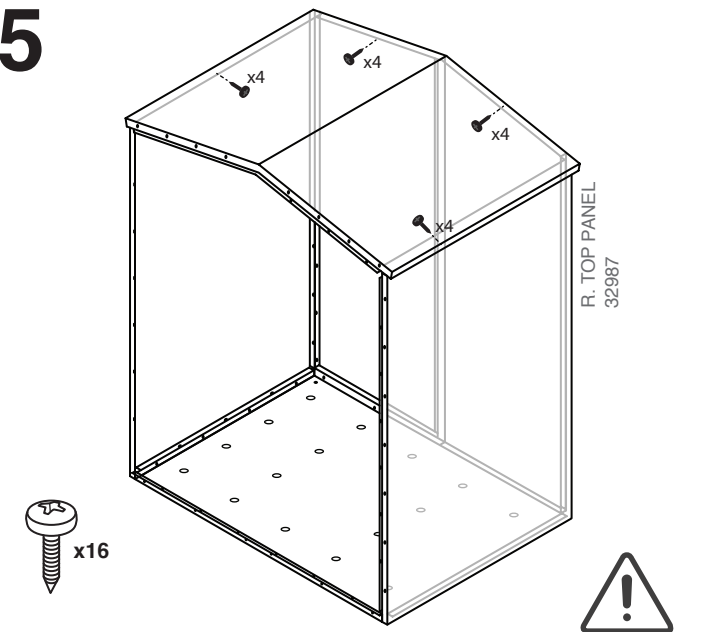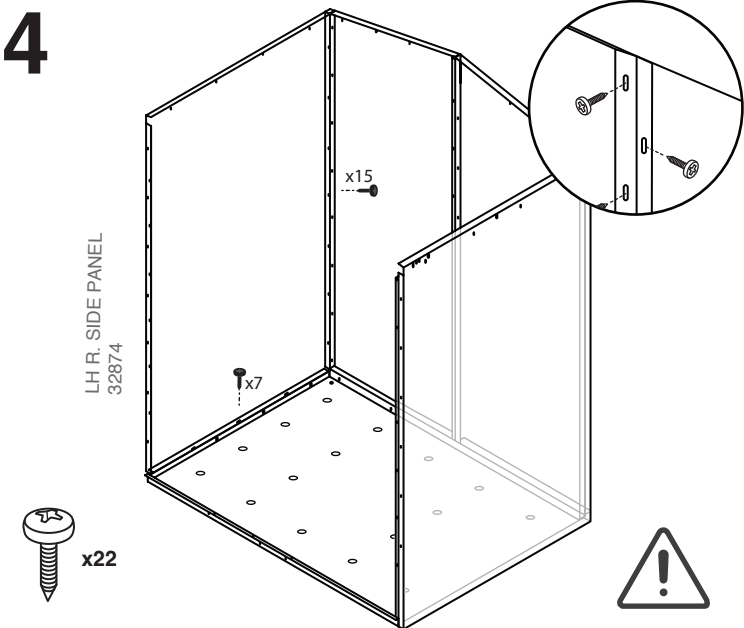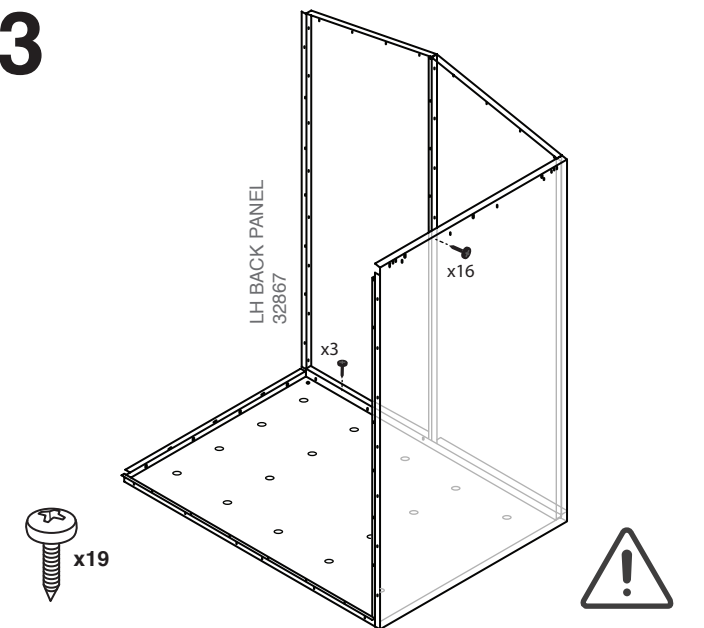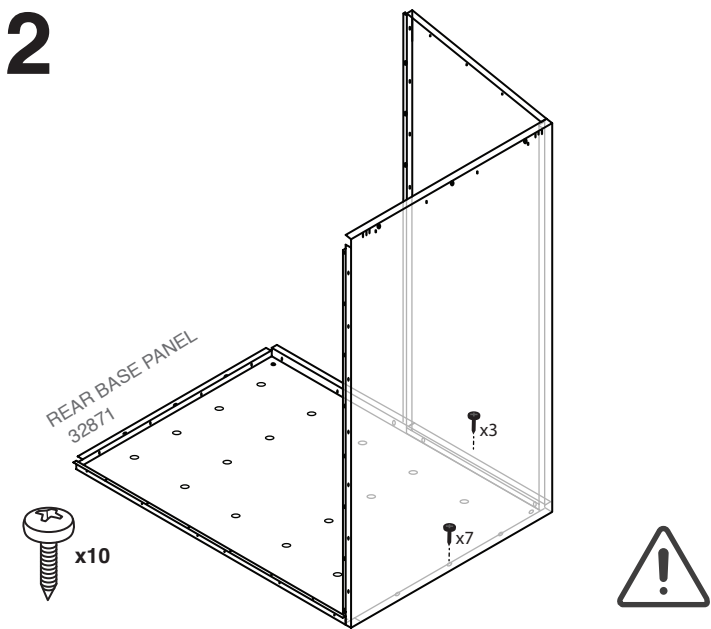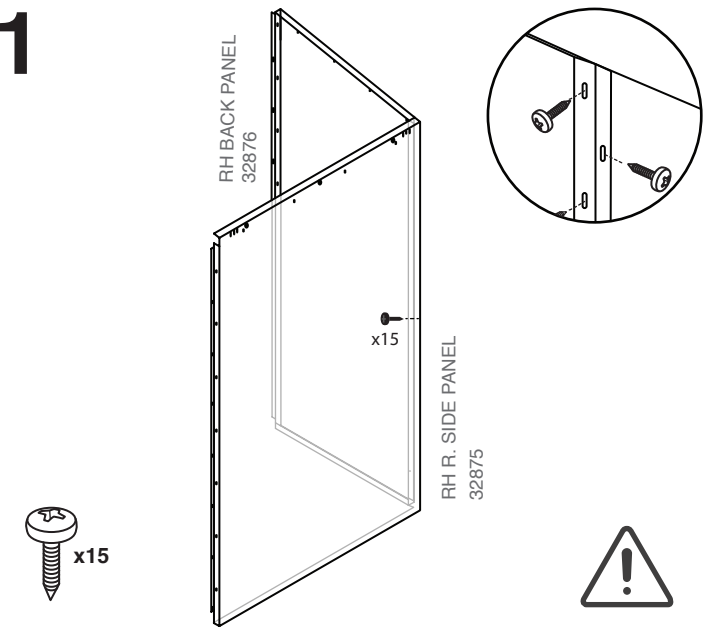


7

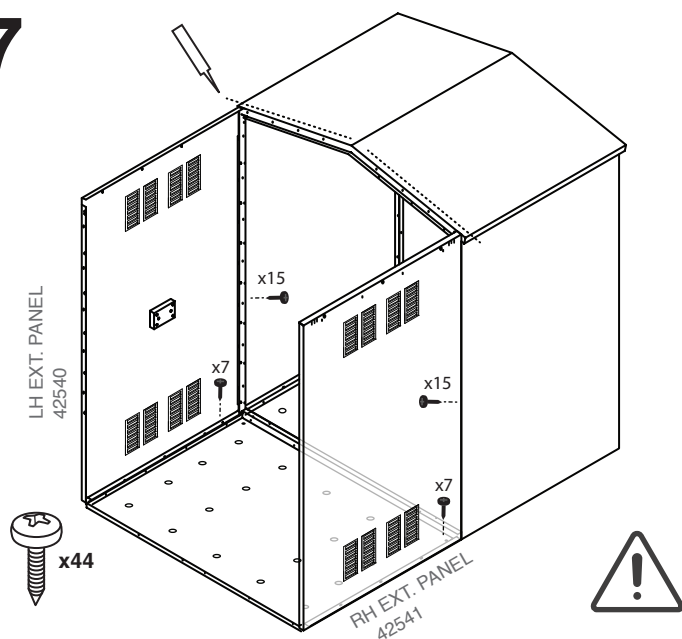


8

REPEAT 6-8 TWICE

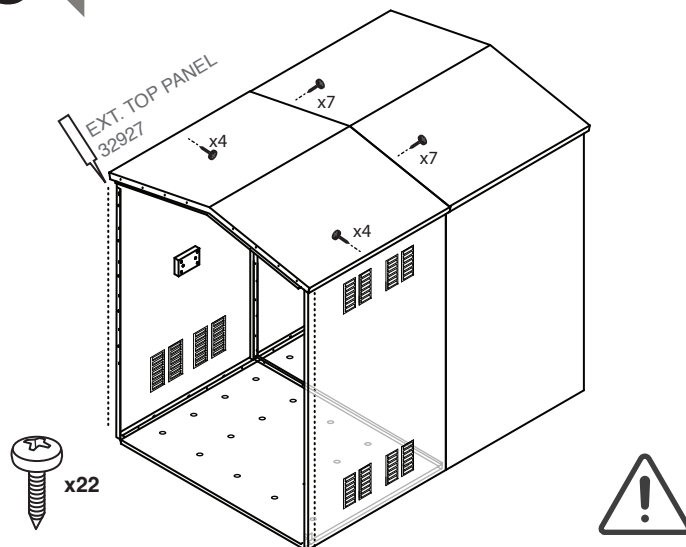


9!


IF YOU HAVE AN OPTIONAL RAMP,
PLACE UNDERNEATH FRONT
BASE PANEL AT THIS STAGE

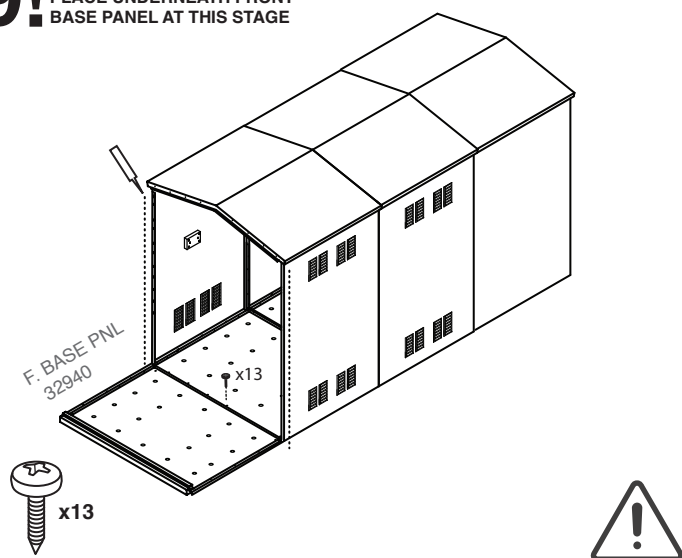


10

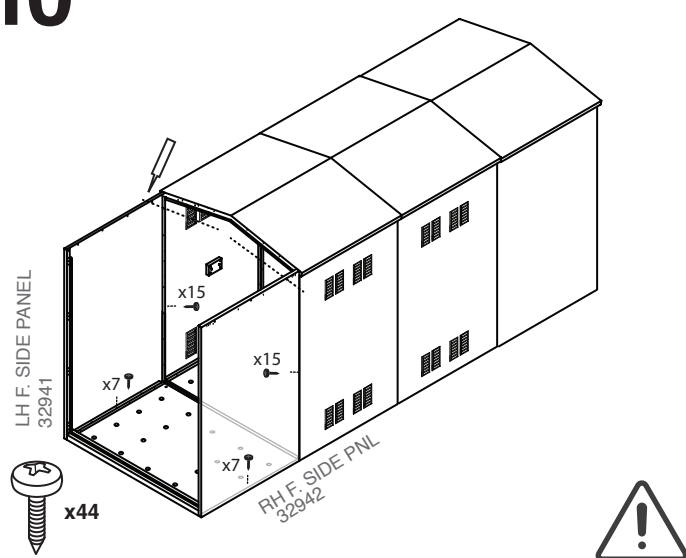

11

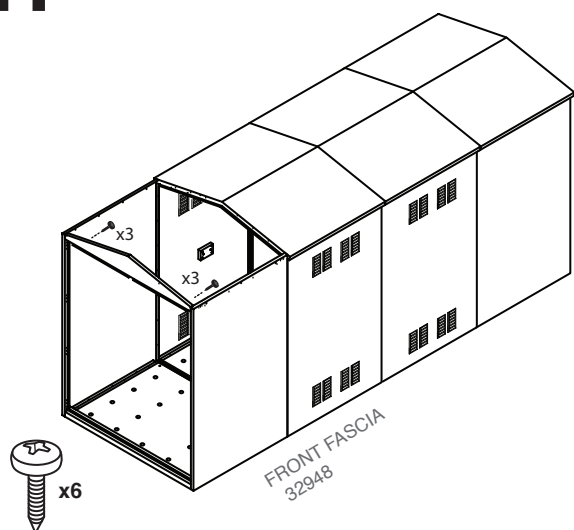

12

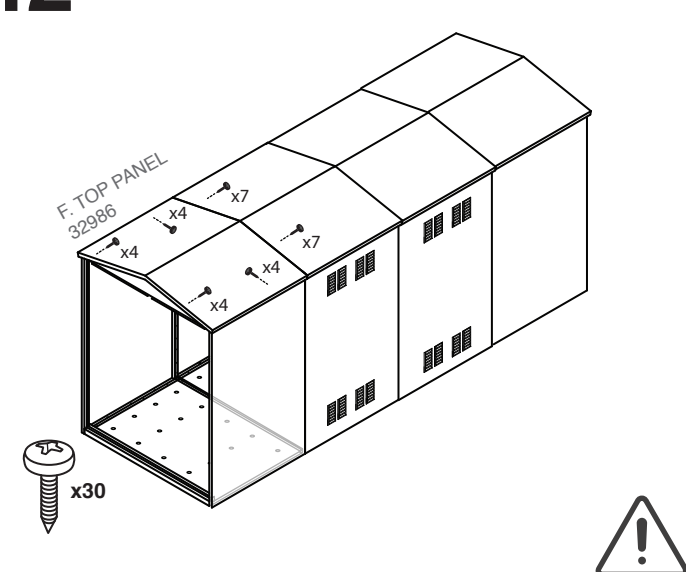

[illegible]

14! NO SCREWS REQUIRED
TOP END OF STRIP TRAPPED UNDER TOP CAP

ROOF JOINT STRIP END 40446

TOP SHROUD 32945 x2

EXT. TOP SHROUD 32996 x2

ROOF JOINT STRIP 40446
APPLY TO ALL INSIDE EDGES
AND FIT FIRST

x12

15

SHROUDS 32996 & 32945
ROOF JOINT STRIP 40446

x2

x2

x4

ROOF STRIP

This diagram illustrates the process of attaching the roof joint strip to the roof of the unit. The unit is shown from a perspective view, highlighting the roof and the front panels. The roof joint strip is shown being attached to the roof using two screws (x2) and four shrouds (x4). A circular inset provides a detailed view of the roof joint strip being attached to the roof, with the label 'ROOF STRIP'.

17 ! REMOVE SCREWS WHICH ALIGN WITH THE COVER CHANNELS.
ALIGN AND PLACE SCREWS BACK

SIDE COVER CHANNEL 32916
ROOF COVER CHANNEL 32918
BASE COVER CHANNEL 37364

The diagram shows a side view of the three cover channels (Side, Roof, and Base) stacked vertically. A screw is shown being removed from the side channel. An inset circle shows a top-down view of the channels, highlighting the internal structure and the location of the screws to be removed.

18!

LEVEL SHED UNTIL DOORS
ALIGN USING ZCOMPPLAS
AS SUITABLE

ZCOMPPLAS S22-23-24

19

