


WORKBENCH STARTER


TOOLS REQUIRED

Power driver POZI-DRIVE PZ3 screwdriver.

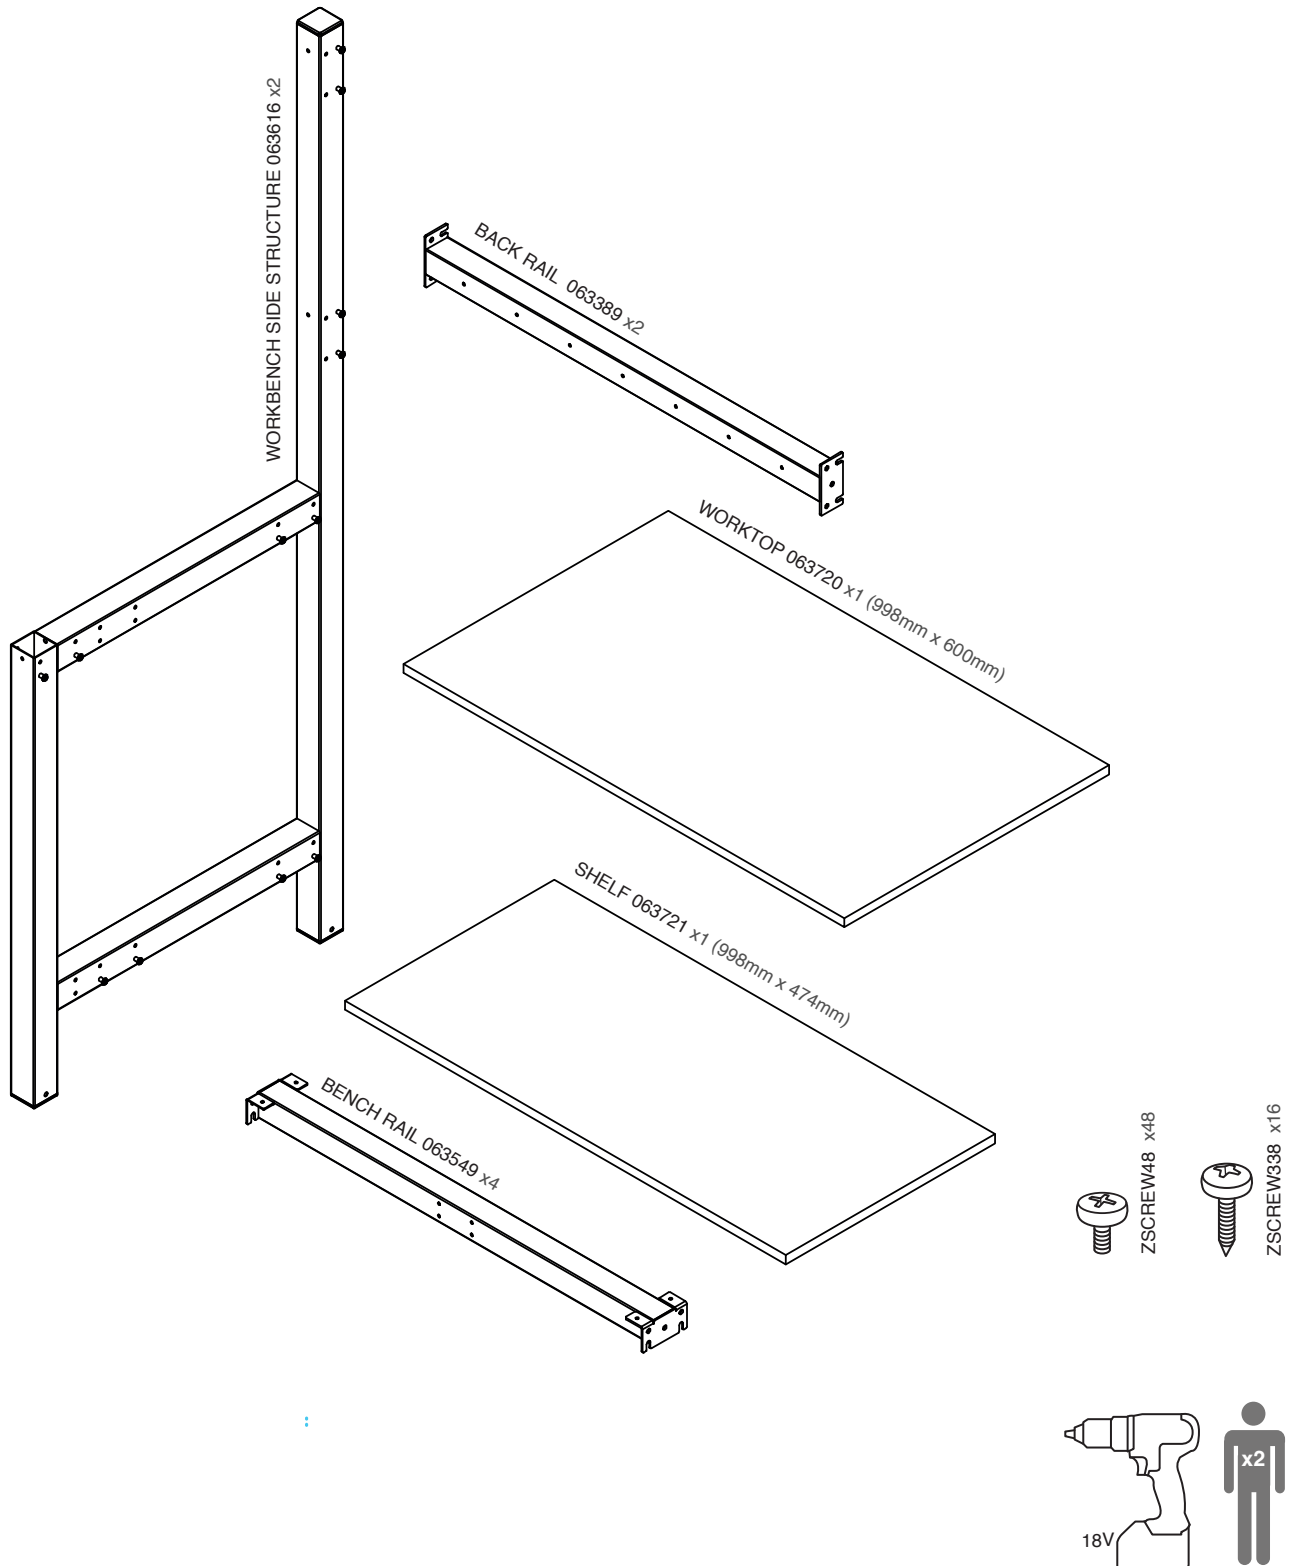

1

PARTIALLY SCREW IN ZSCREW48 INTO THE FRAME.

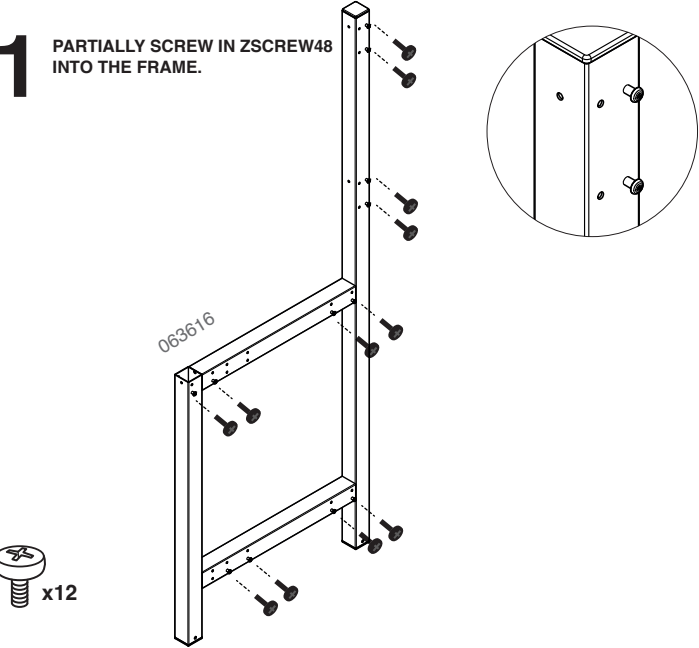


063616

x12

2

REPEAT ON THE OPOSITE SIDE OF THE FRAME

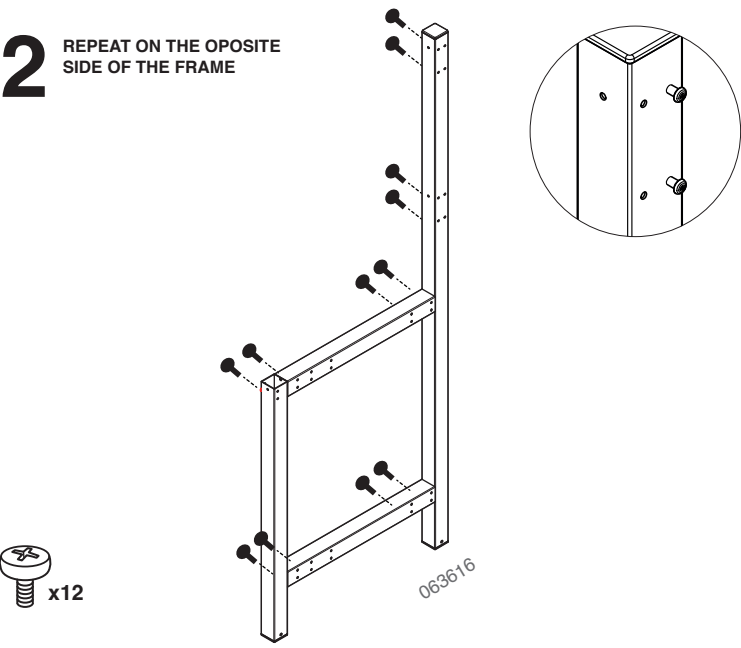


063616

x12

3

HOOKE ON THE BEAMS OVER THE SCREWS FROM STEP 1 & 2. TIGHTEN SCREWS.

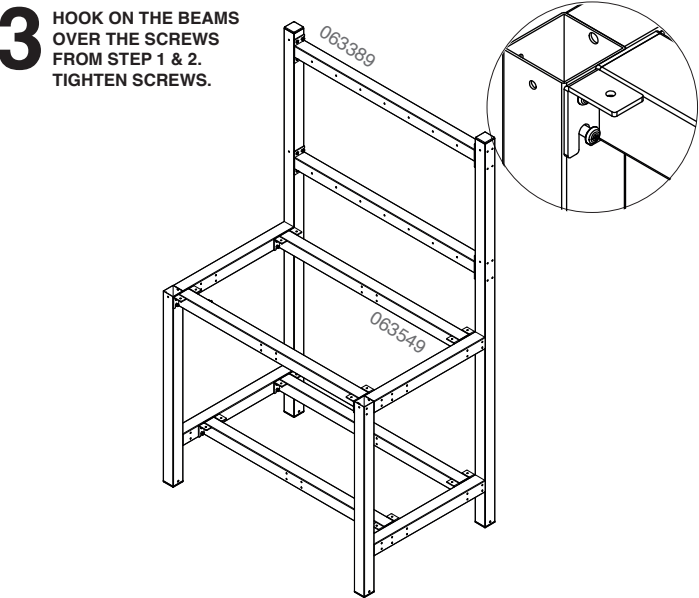


063389

063549

x12

4

SCREW IN ZSCREW48 TO SECURE THE BEAM

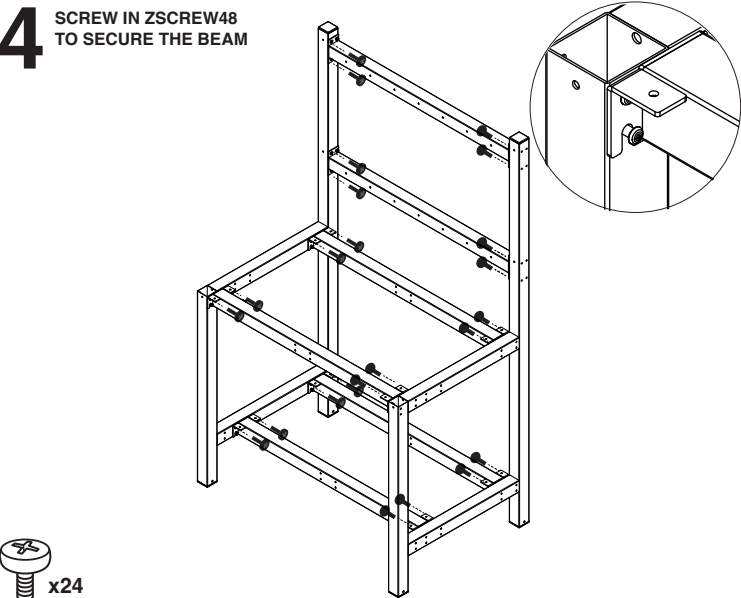


063389

063549

x24

5

ATTACH THE WORKTOP & SHELF IN POSITION

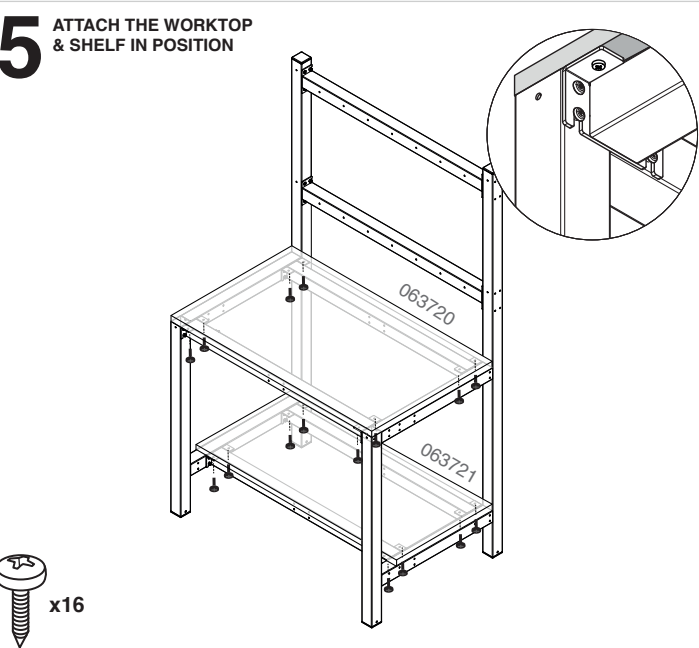


063720

063721

x16


6

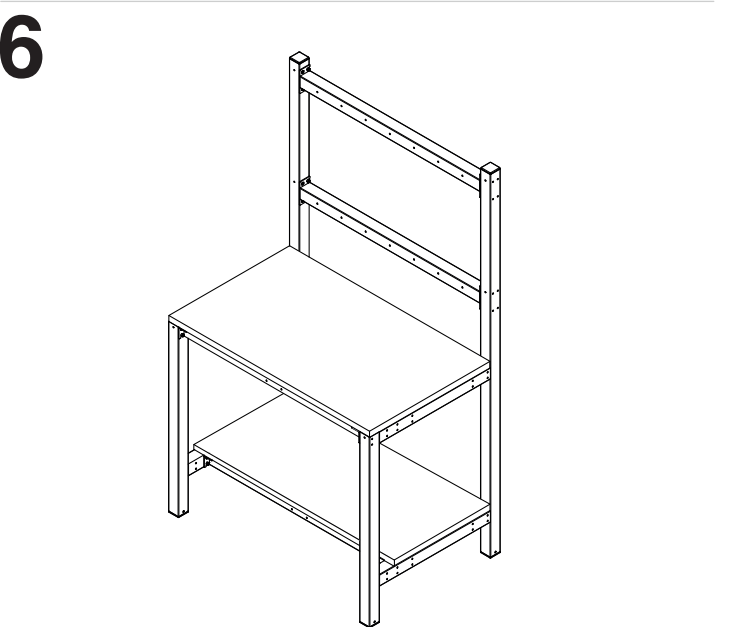


WORKBENCH EXTENSION

TOOLS REQUIRED


Power driver POZI-DRIVE PZ3 screwdriver.

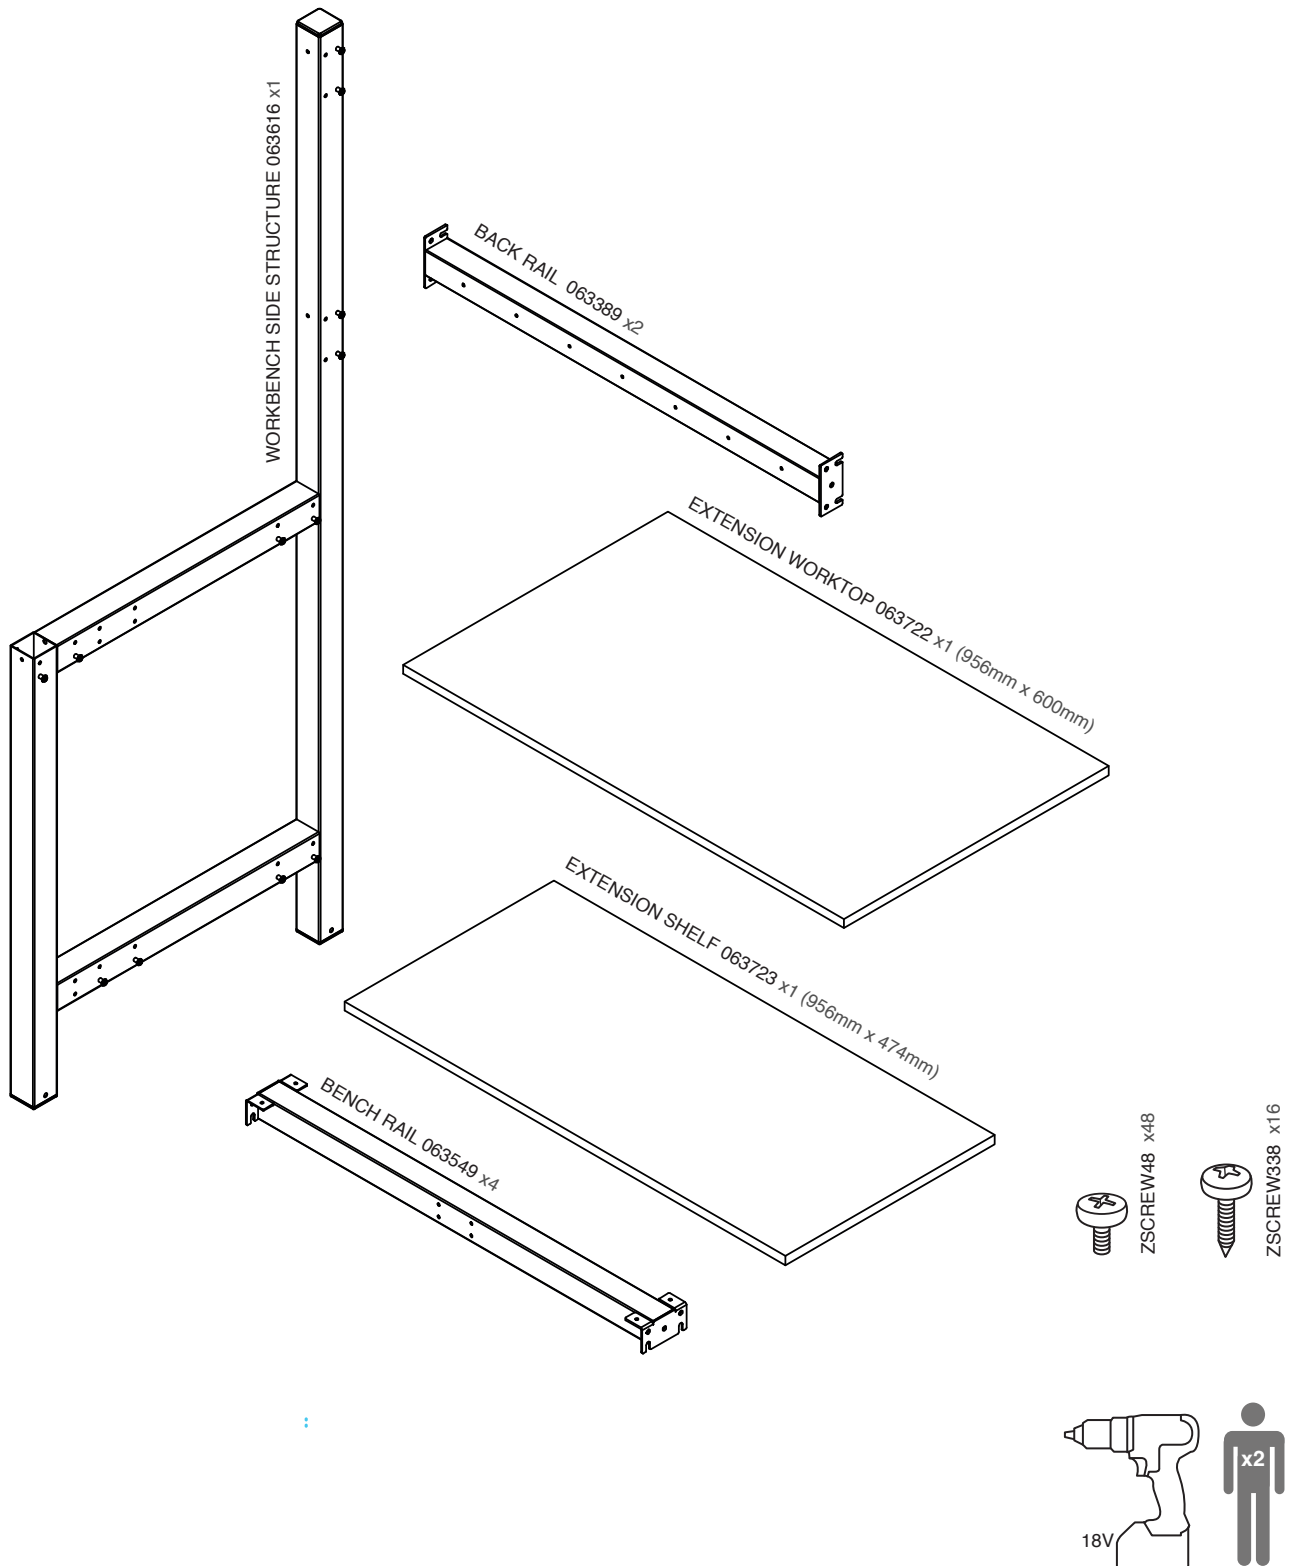


1 PARTIALLY SCREW IN ZSCREW48 INTO THE FRAME.

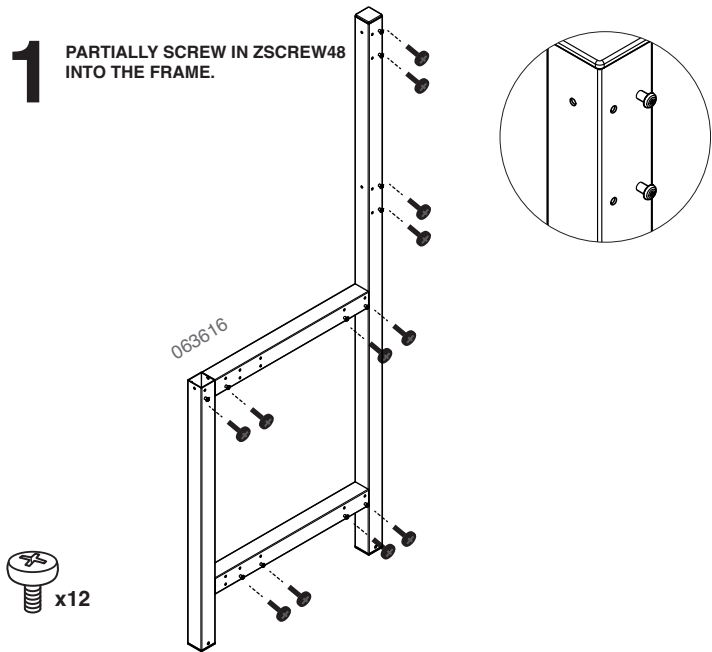


2 REPEAT ON THE STARTER FRAME

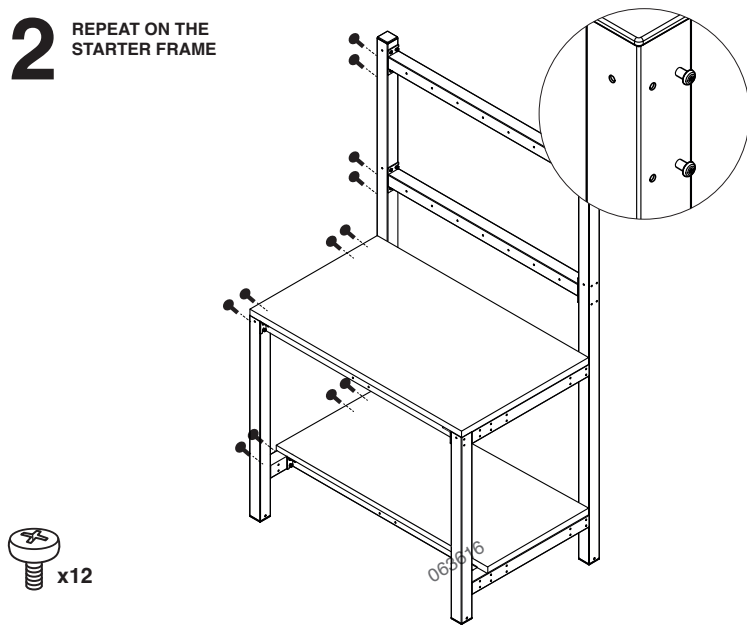


3 HOOK ON THE BEAMS OVER THE SCREWS FROM STEP 1 & 2. TIGHTEN SCREWS.

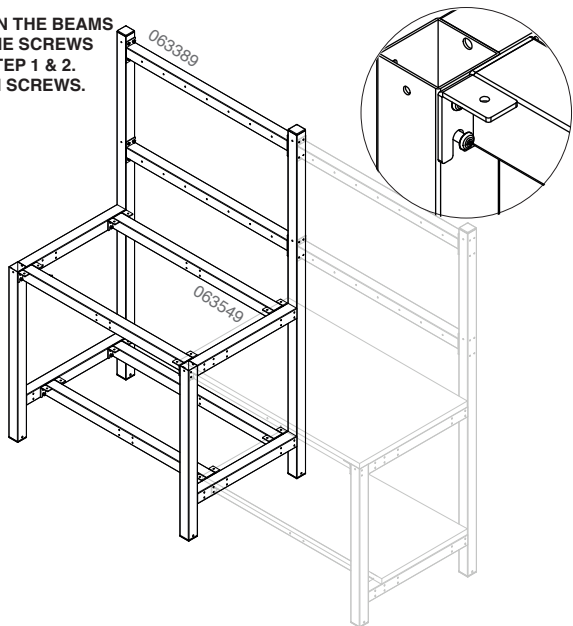

4 SCREW IN ZSCREW48 TO SECURE THE BEAM

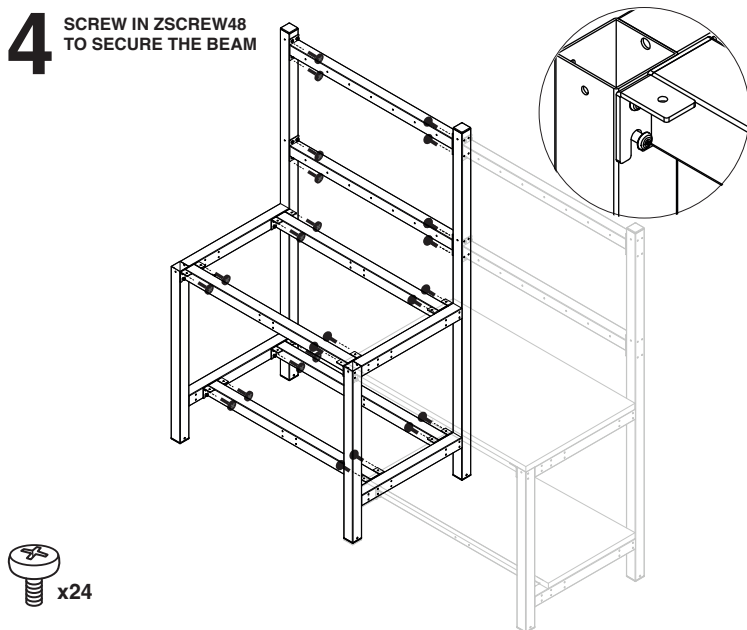

5 ATTACH THE WORKTOP & SHELF IN POSITION

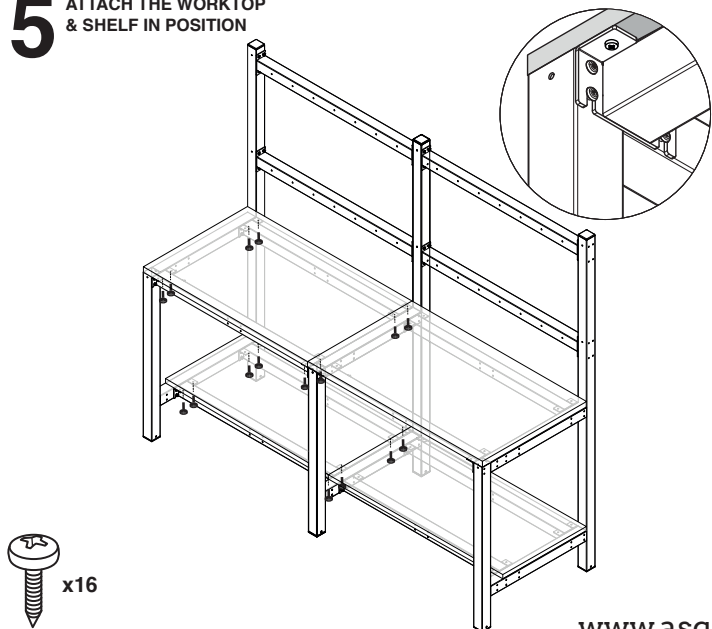

6 REPEAT FOR EACH EXTENSION

