

ADDITION



BASE INSTRUCTIONS

Flat and firm base. Recommended: concrete, tarmac or paving flags.
Min. distance from walls/ shrubbery: 1000mm.
Min. base size (WxDxH) 1990mm x 1100mm x 50mm.

LEVELING THE UNIT

Correctly level the constructed unit using the shims (ZCOMPPLAS) provided prior to fixing the unit to the ground. Slide the packing pieces under the corners of the unit base as required until an equal gap has been achieved around the door allowing for its smooth operation and alignment.


It is always recommended to anchor the unit in to the ground. Drill through the four holes in the base of the unit using 6mm dia masonry drill to a depth of 70mm. Screw in the anchor fixings. (These have a self cutting thread). **If not anchoring the unit, fit the 4 self-seal plugs BEFORE BUILDING to block the fixing holes underneath. Fit 4 self-seal plugs in the side of base to stop water from entering the unit.**

TOOLS REQUIRED

Power driver POSI-DRIV screwdriver, 6mm dia. masonry drill and a 10mm socket or spanner.




Warning: some panels may weigh over 20Kg. Beware of manual handling

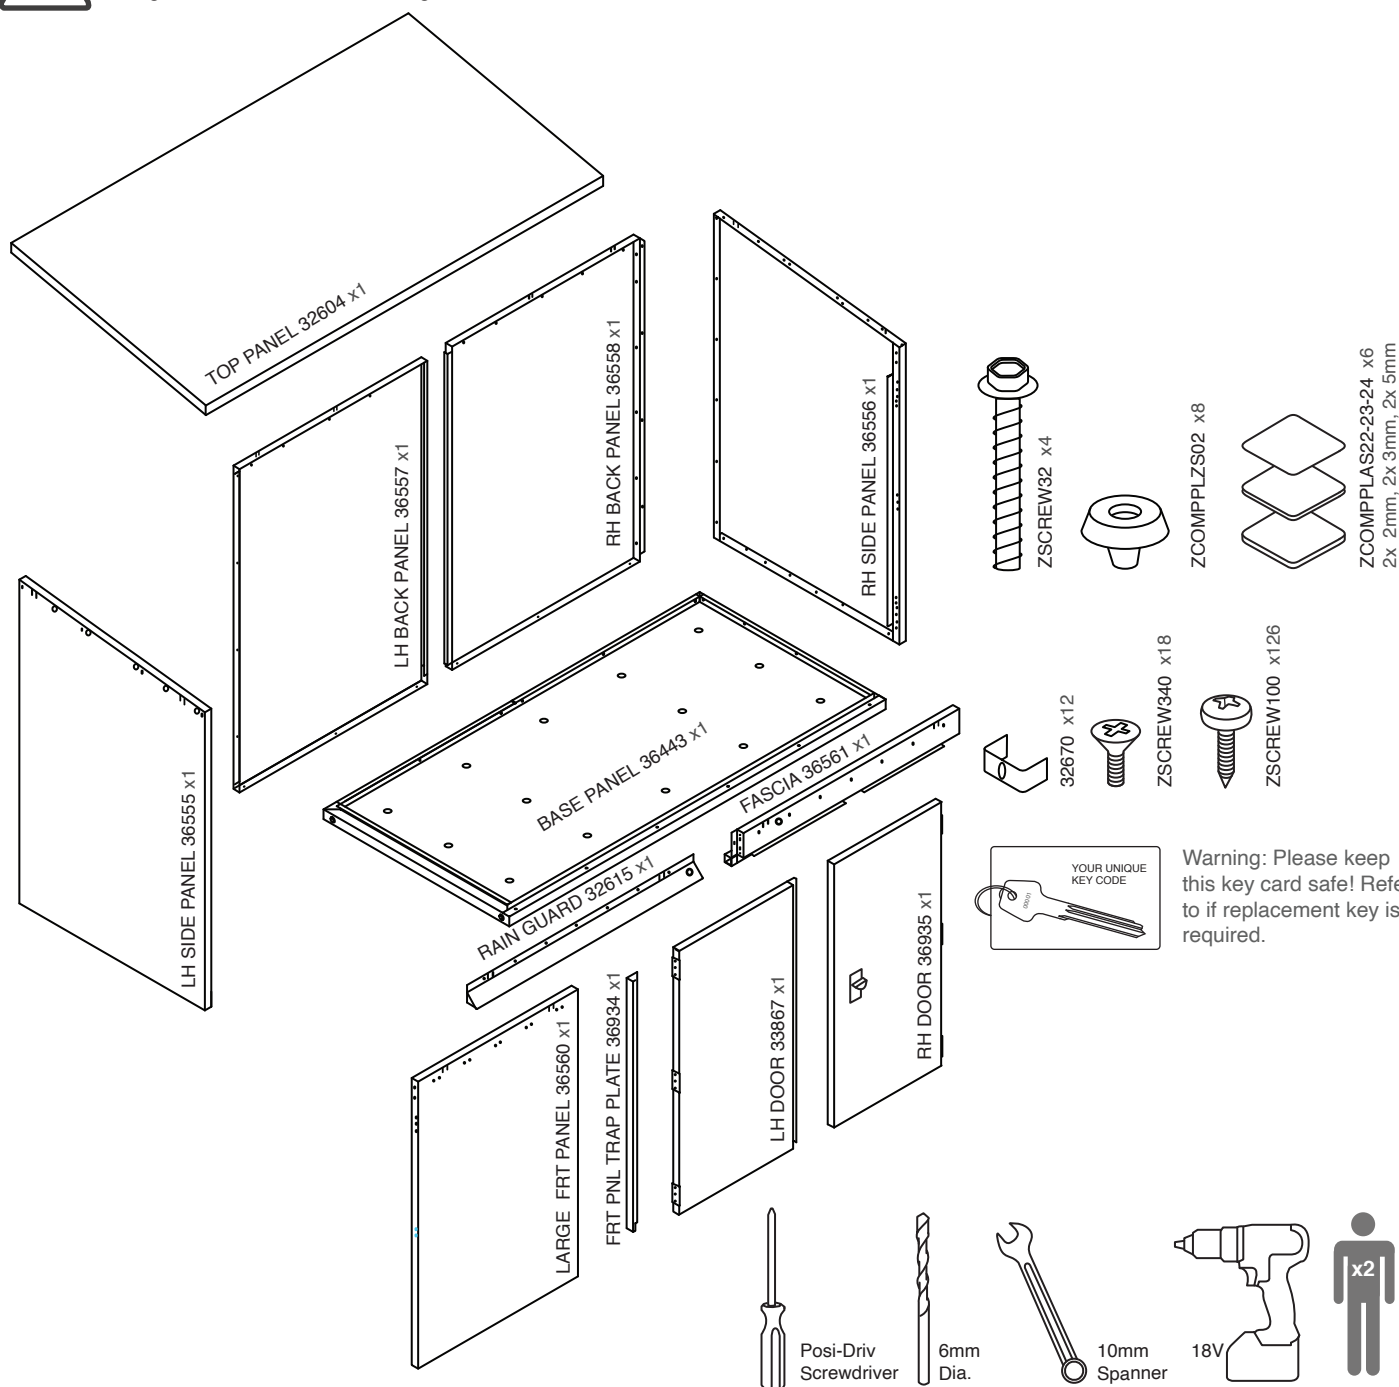


PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE


1

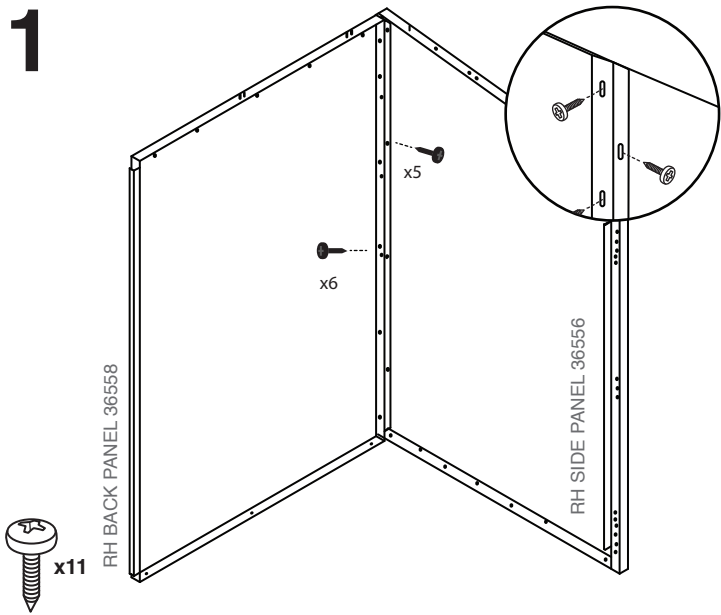


2! FIT SELF-SEAL PLUGS: 4X SIDE OF BASE. 4X BOTTOM OF BASE IF UNIT IS NOT BEING SECURED TO FLOOR

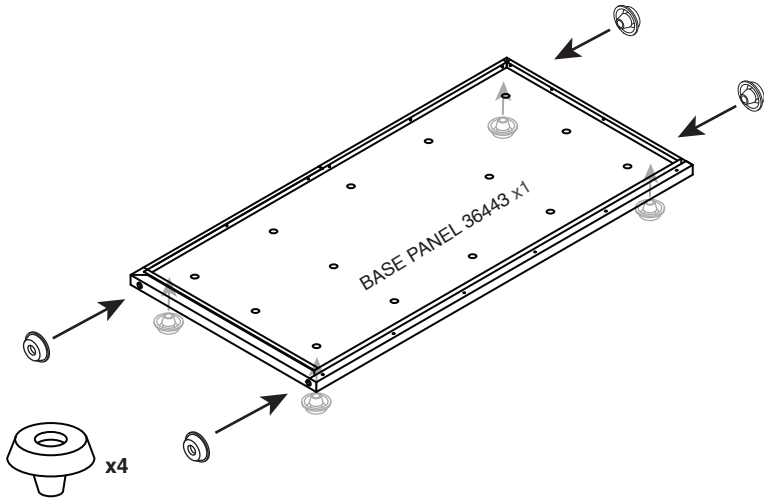


3

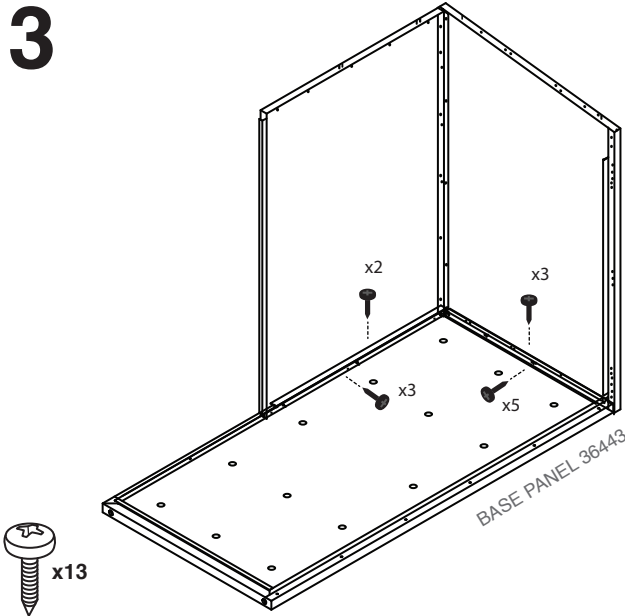


4

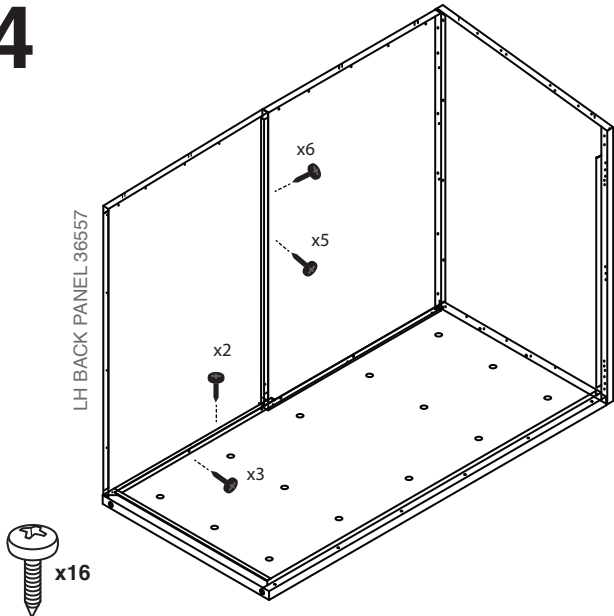


5

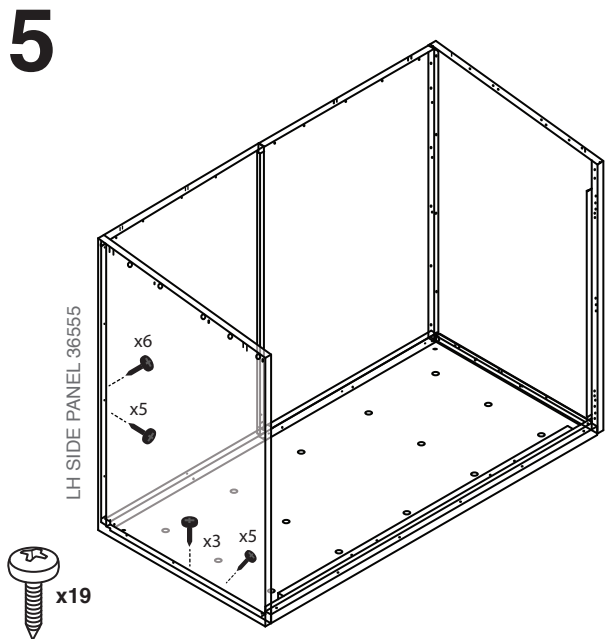


6! ATTACH PANEL 36560 TO LEFT OR RIGHT HAND SIDE TO DETERMINE DOOR LOCATION

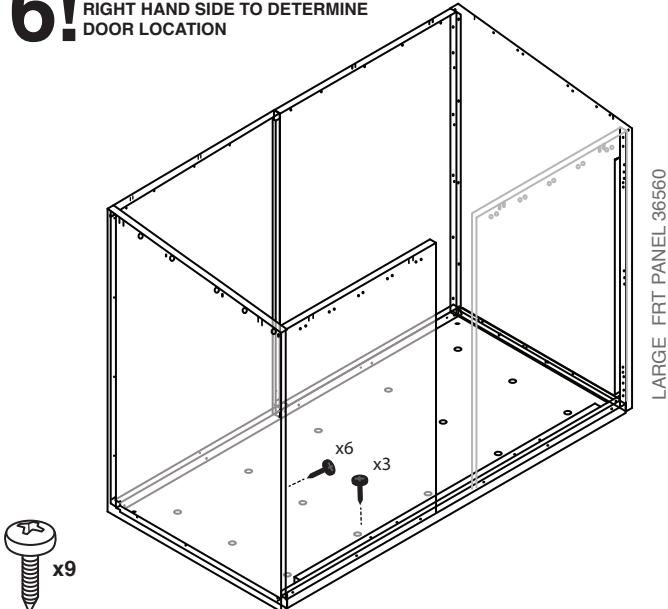


7

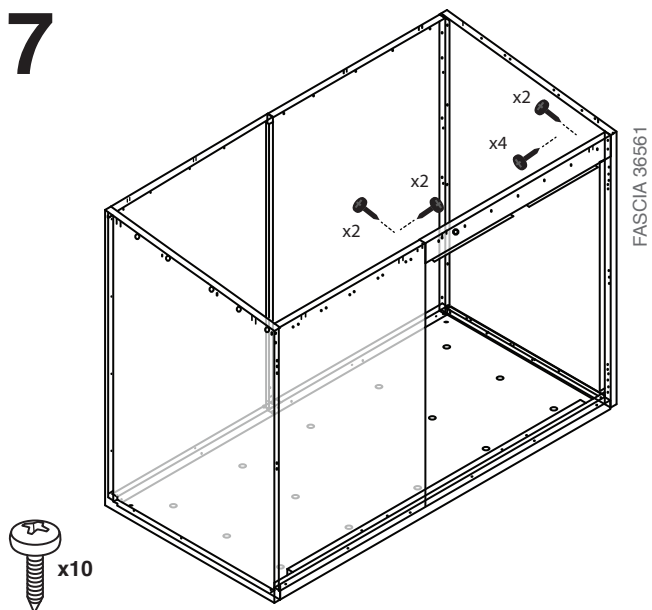


8

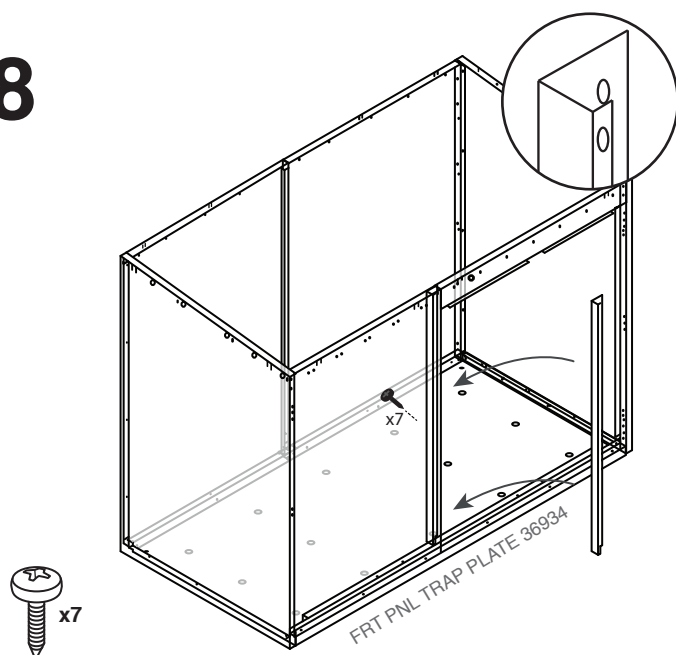


9

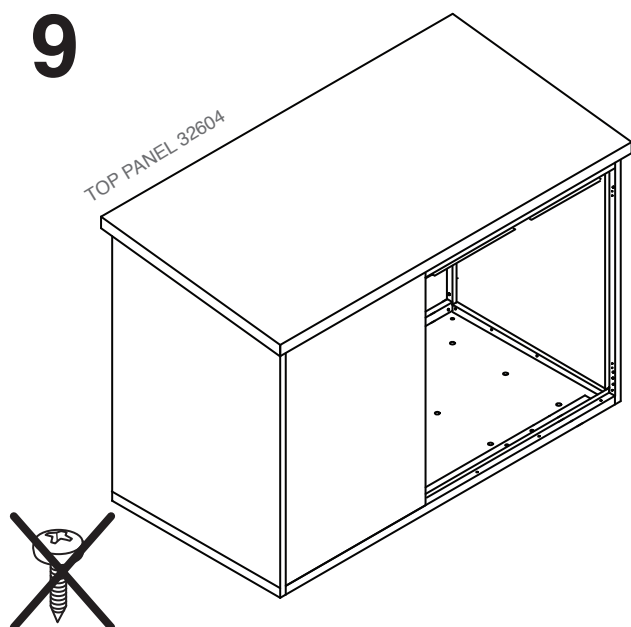


10!

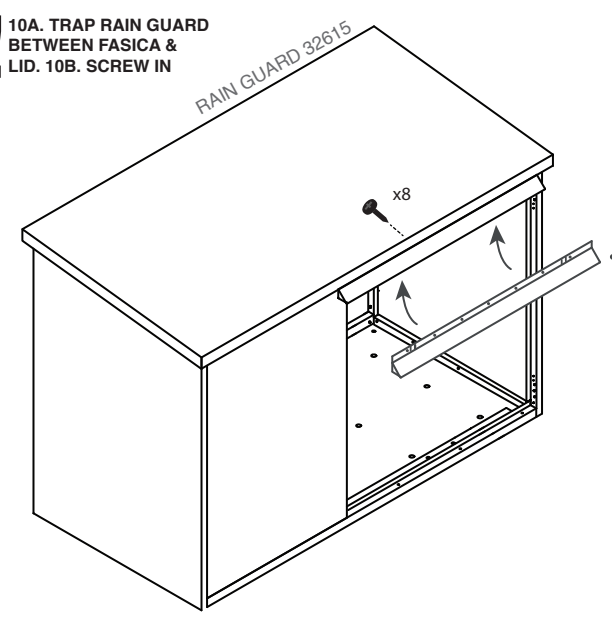

11

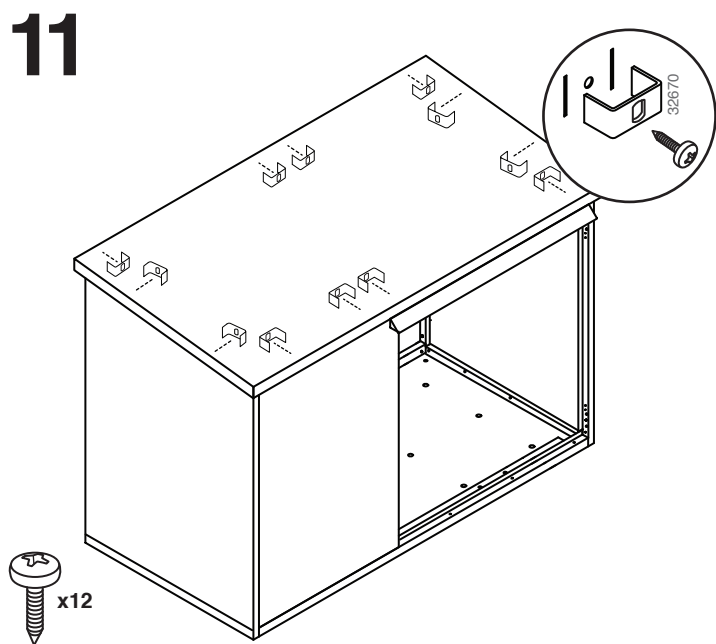

12

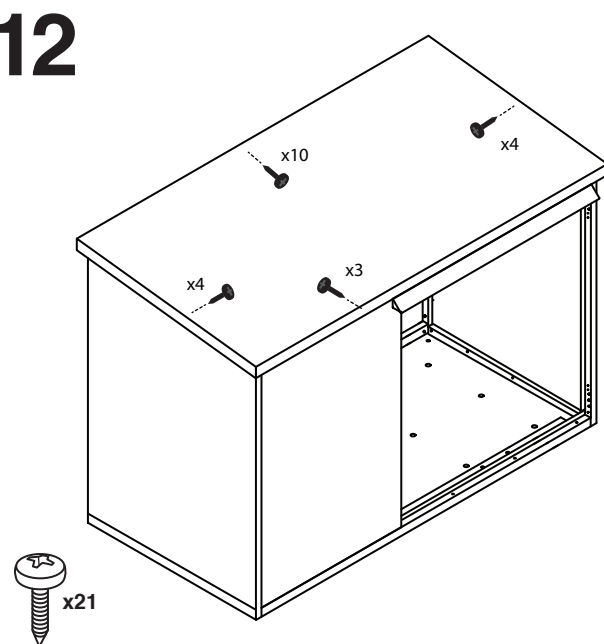

[illegible]

14! LEVEL SHED UNTIL DOORS
ALIGN USING ZCOMPPLAS
AS SUITABLE

This diagram illustrates the process of leveling the shed by adjusting the door alignment. It shows the shed's frame with the doors partially open. Arrows indicate the placement of ZCOMPPLAS spacers at the base of the doors to ensure they are level. A stack of three spacers is shown on the left, and individual spacers are shown being placed at the bottom corners and along the door edges. The text 'ZCOMPPLAS22-23-24' is written vertically on the right side of the diagram.

15

Diagram 15 illustrates the step of attaching the front panel to the side panel. A large screw is shown being inserted into the pre-drilled holes of the front panel, which is being aligned with the side panel. A circular inset provides a close-up view of the screw being tightened into the corner joint of the cabinet.