

# GLADIATOR PLUS 1



## BASE INSTRUCTIONS

Flat and firm base. Recommended: concrete, tarmac or paving flags.  
Min. distance from walls/ shrubbery: 1000mm.  
Min. base size (WxDxH) 2410mm x 3790mm x 50mm.

## LEVELING THE UNIT

Correctly level the constructed unit using the shims (ZCOMPPLAS) provided prior to fixing the unit to the ground. Slide the packing pieces under the corners of the unit base as required until an equal gap has been achieved around the door allowing for its smooth operation and alignment.


It is always recommended to anchor the unit to the ground. Drill through the four holes in each of the base of the unit using 6mm dia masonry drill to a depth of 70mm. Screw in the anchor fixings. (These have a self cutting thread). **If not anchoring the unit, fit the self seal plugs BEFORE BUILDING to block the fixing holes from underneath.** Please note product must be bolted down to comply with LPS1175.

## TOOLS REQUIRED

Power driver POSI-DRIV screwdriver, 6mm dia. masonry drill and a 10mm socket or spanner.



Warning: some panels may weigh over 20Kg Beware of manual handling

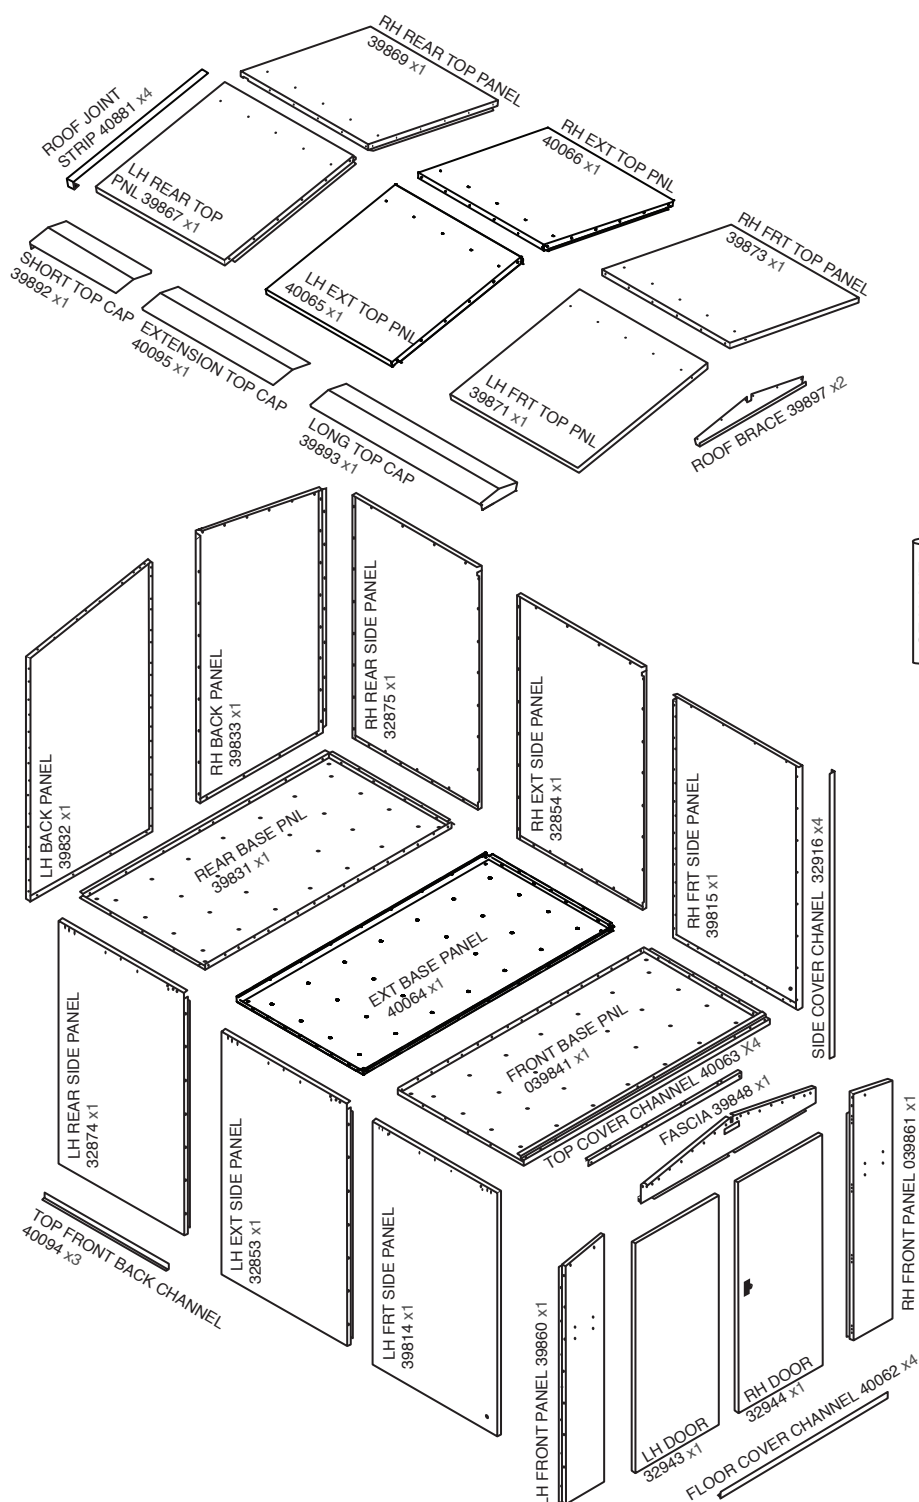

SEALANT  
ZSILCOL1 x2




ZSCREW32 x12



ZCOMPPLZS02 x12



ZCOMPPLAS22-23-24 x18  
6x 2mm, 6x 3mm, 6x 5mm



Z32670 x22




ZSCREW340 x24



ZSCREW100 x406



ZSCREW04 x4



YOUR UNIQUE KEY CODE


Warning: Please keep this key card safe! Refer to if replacement key is required.




Posi-Driv  
Screwdriver



6mm  
Dia.



10mm  
Spanner

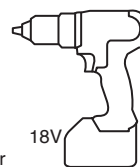

18V




x2


For maintenance instructions of this product visit [www.asgardsss.co.uk](http://www.asgardsss.co.uk)

PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE


1

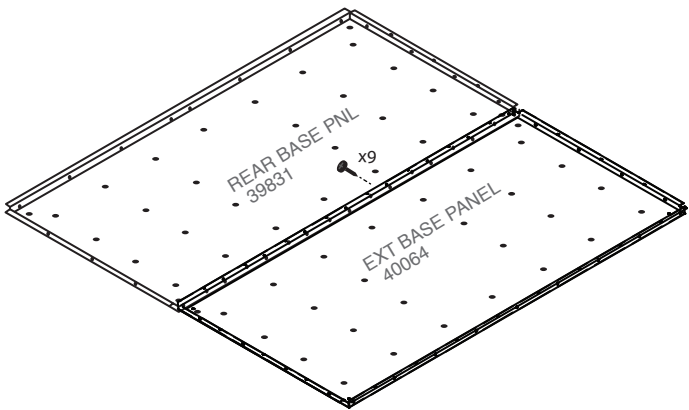


2! IF YOU HAVE AN OPTIONAL RAMP, PLACE UNDERNEATH FRONT BASE PANEL AT THIS STAGE

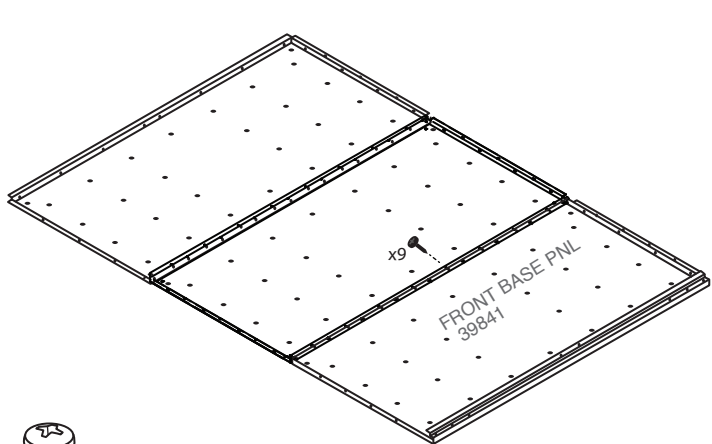


3

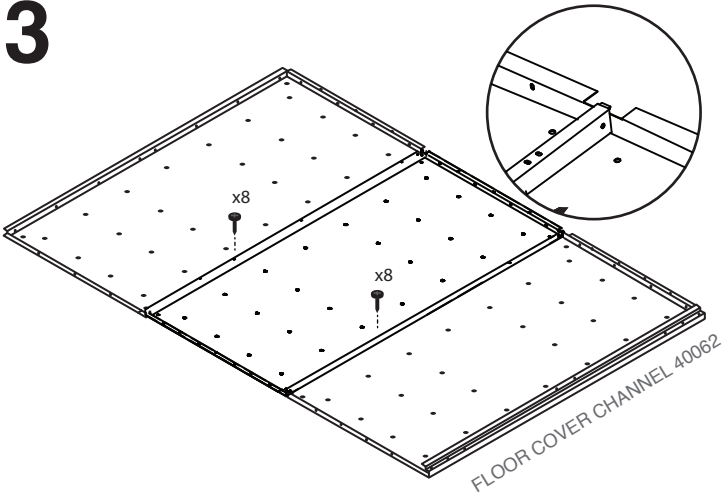


4

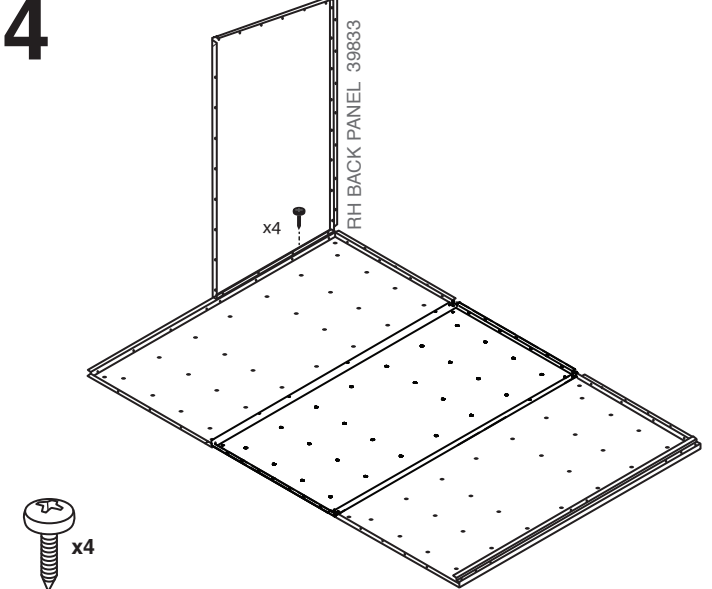







5

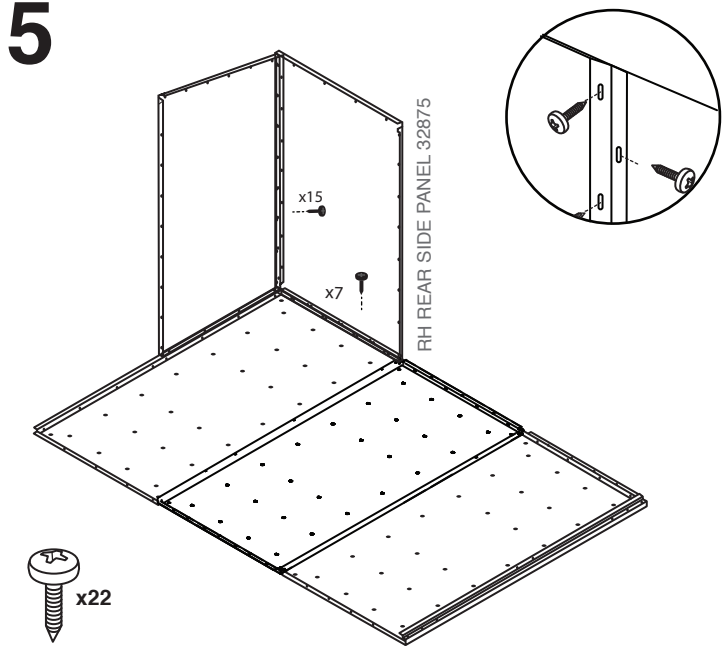

6

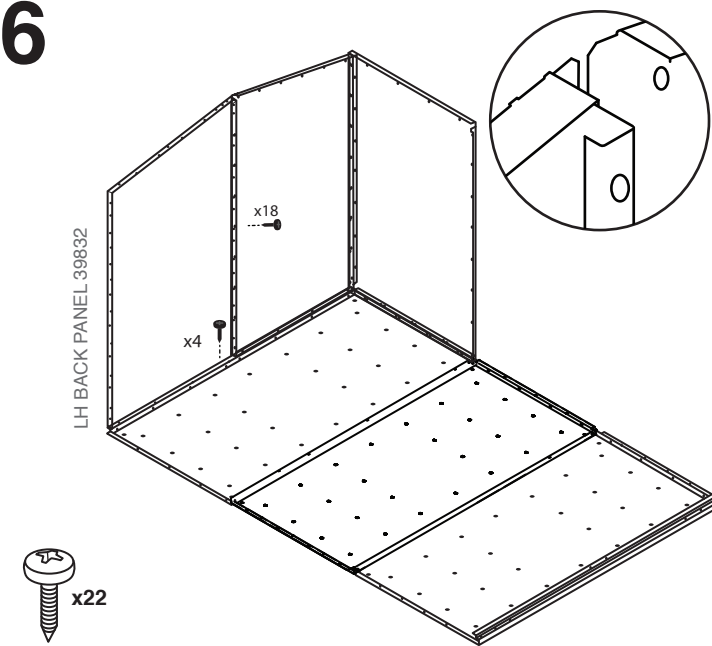


PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE

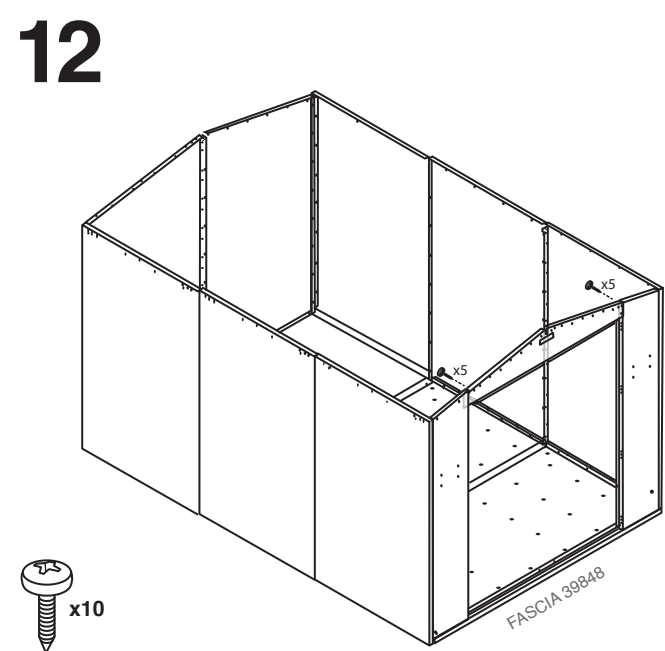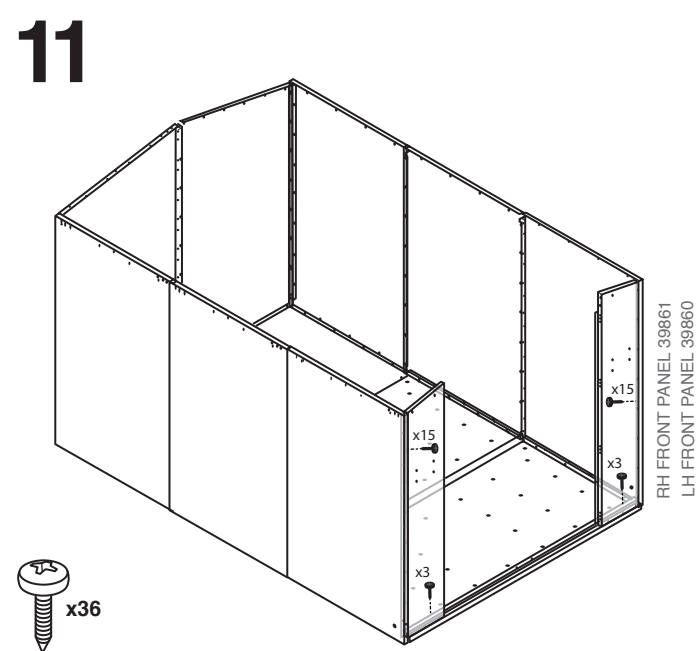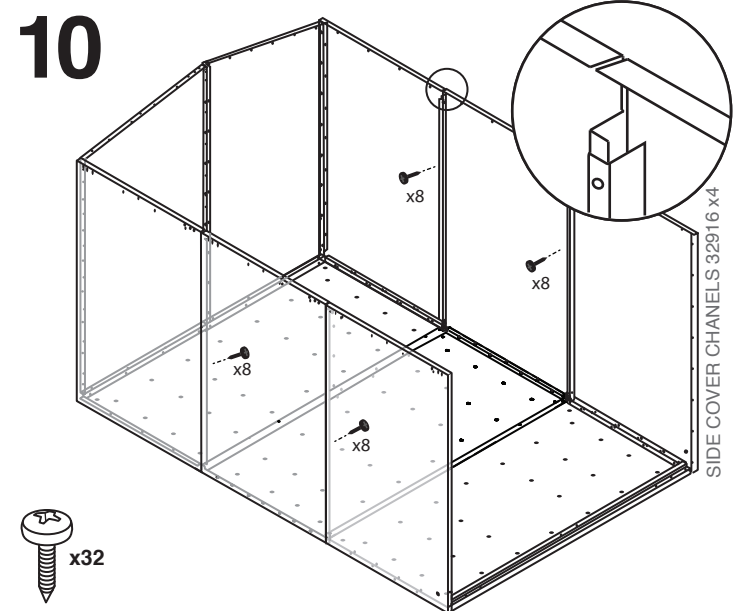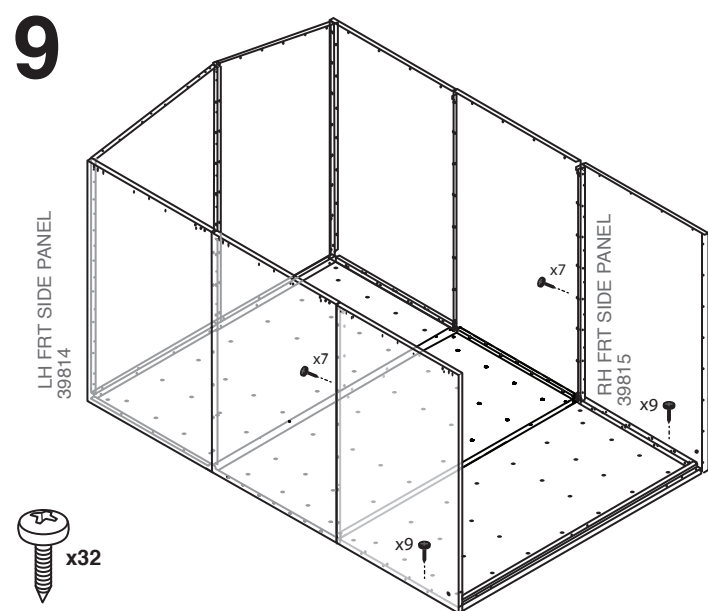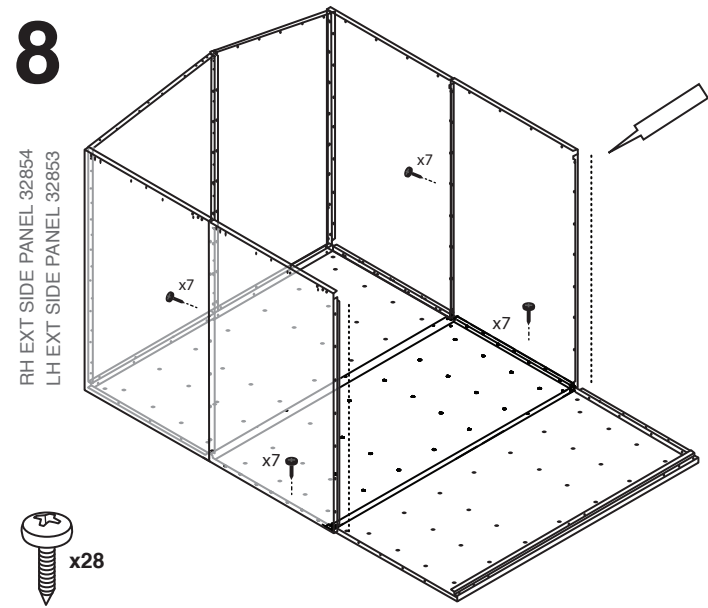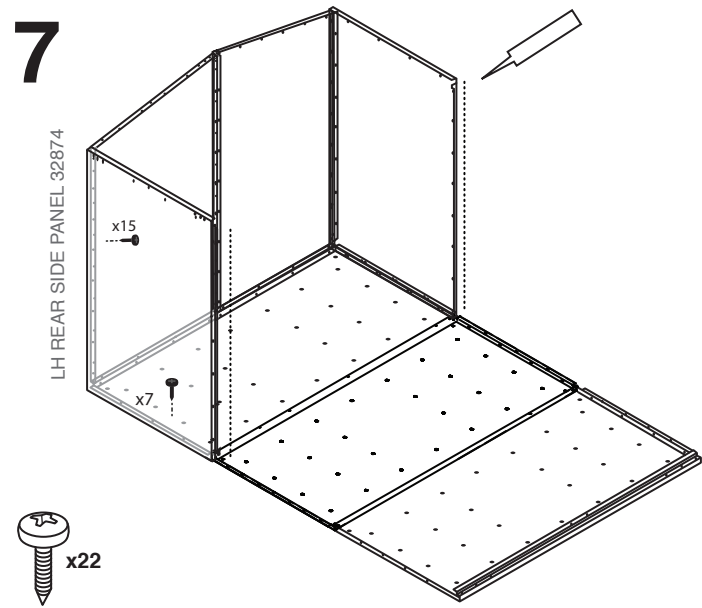


PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE


13

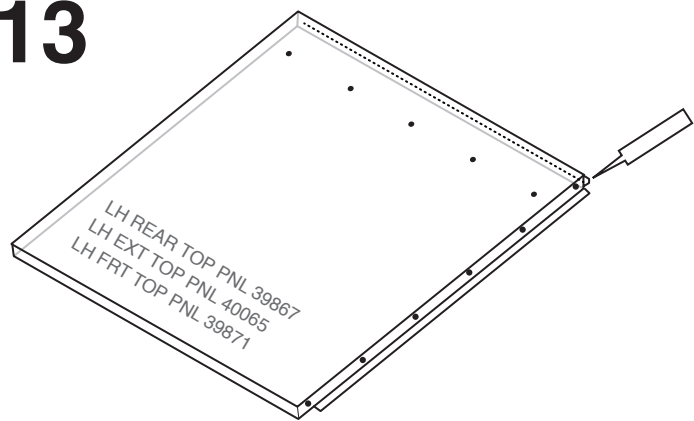


14

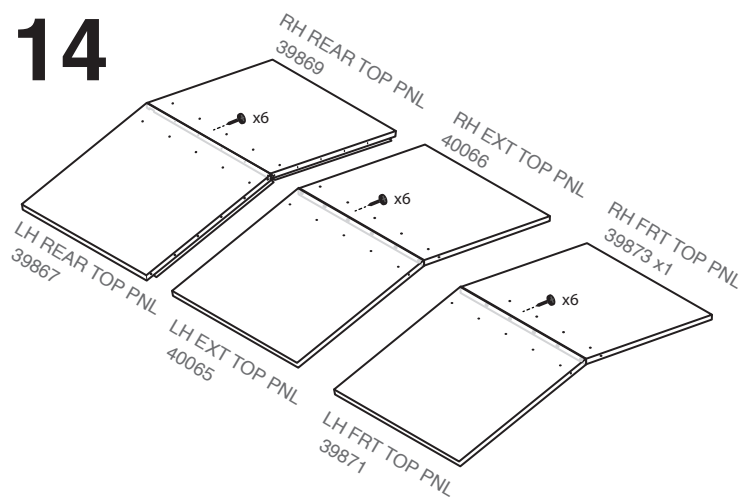


15

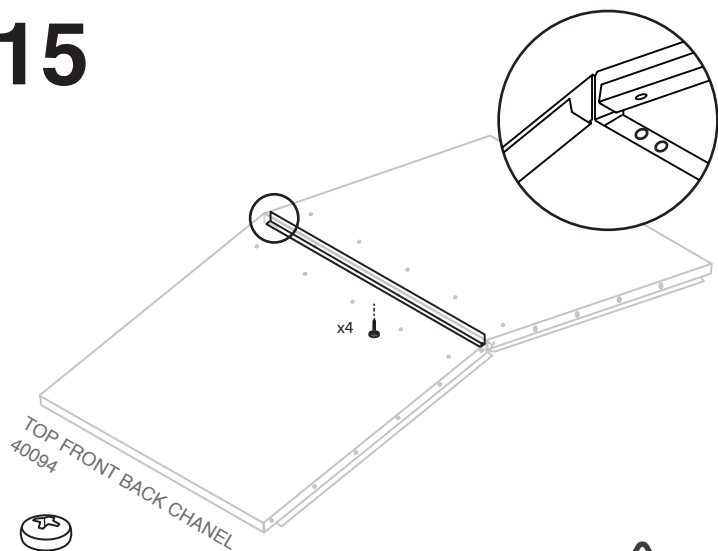



16

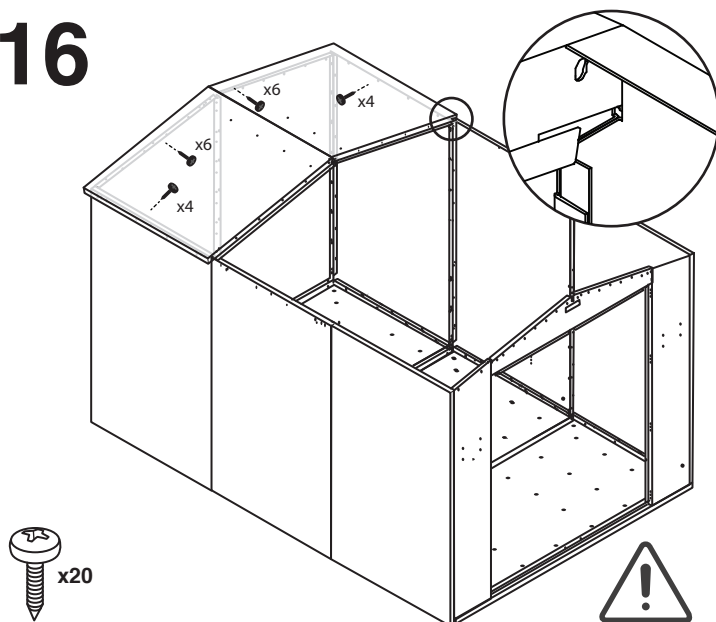

17

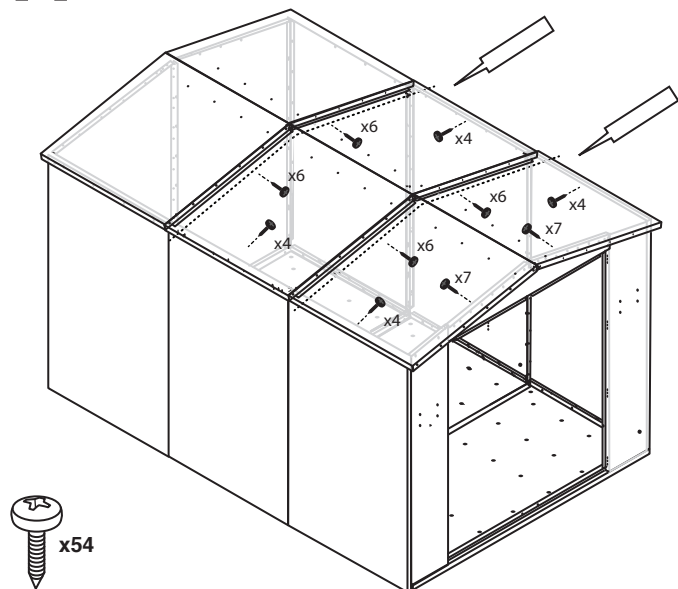


18

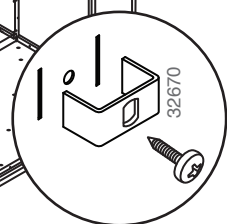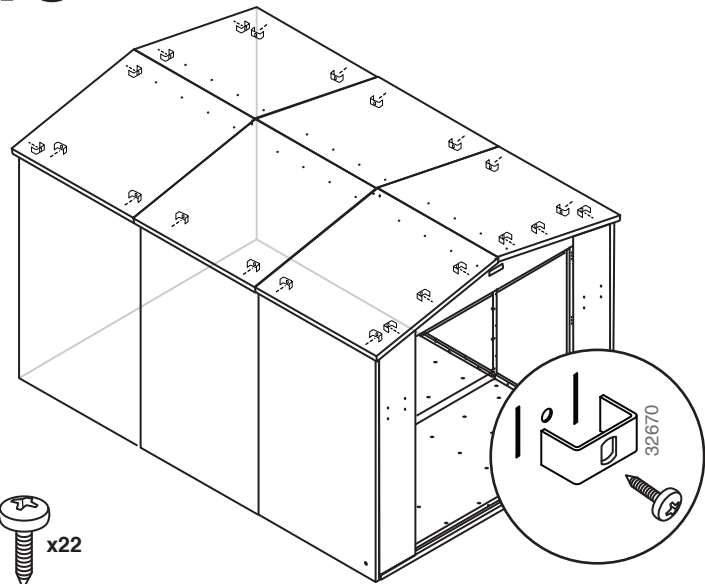


PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE


19

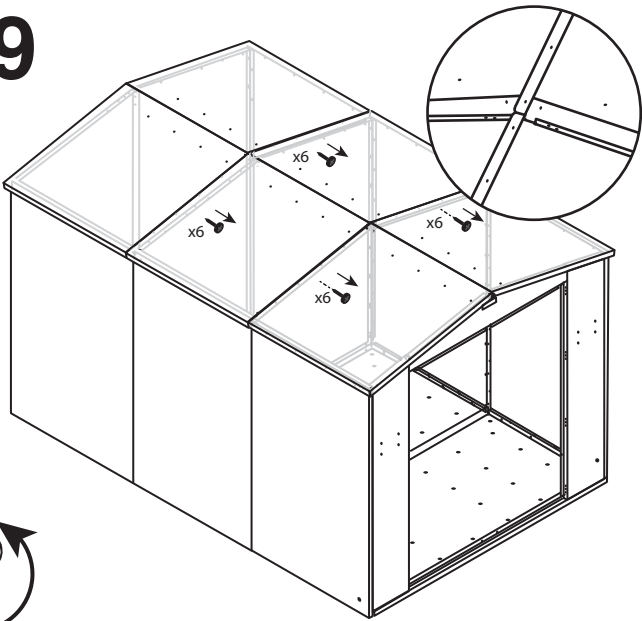


20

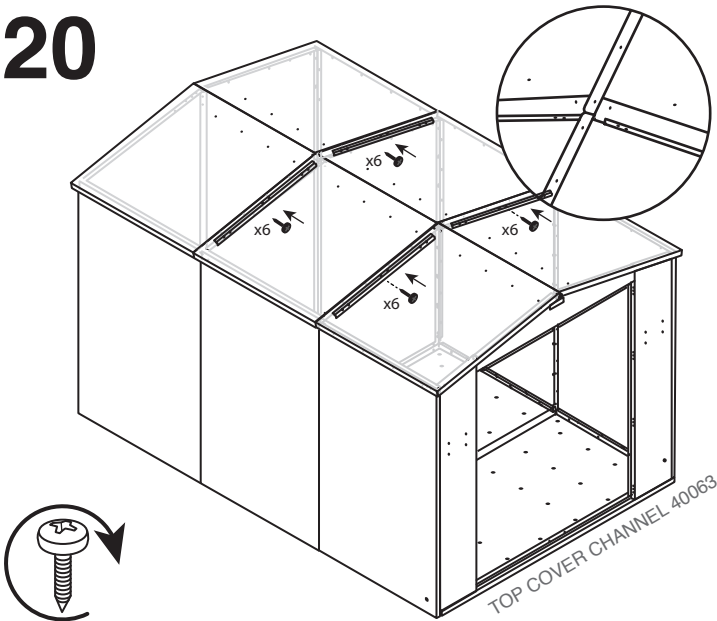


21

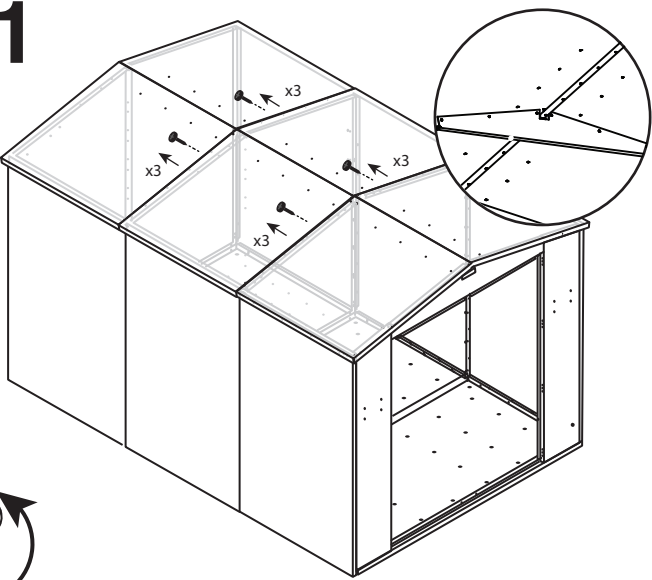


22

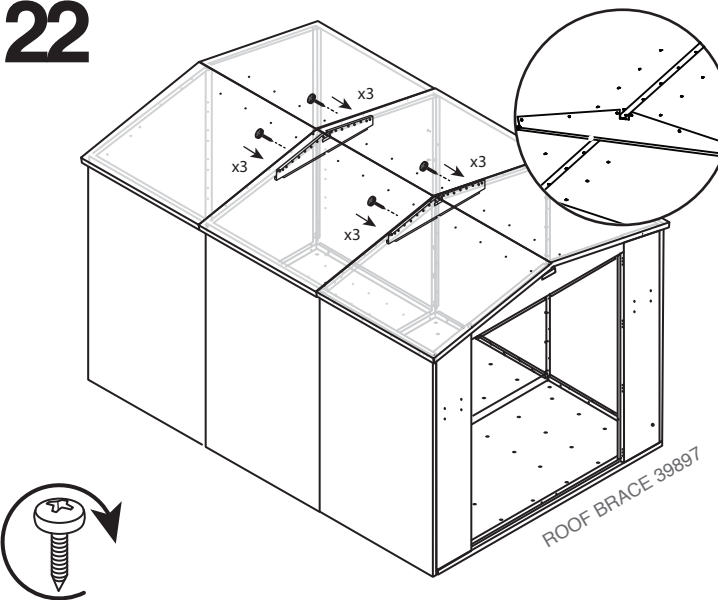

23

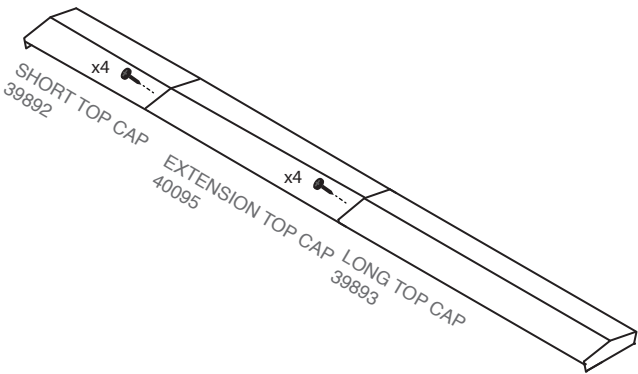


24! NO SCREWS REQUIRED  
TOP END OF STRIP TRAPPED  
UNDER TOP CAP

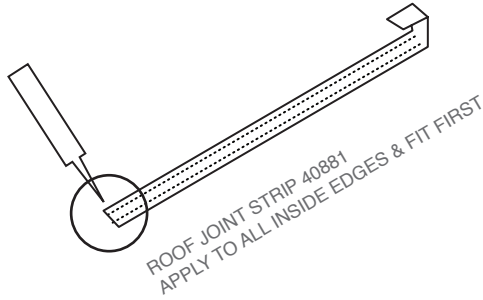


x8

# 25

SHORT TOP CAP 39892  
EXTENSION TOP CAP 40095  
LONG TOP CAP 39893

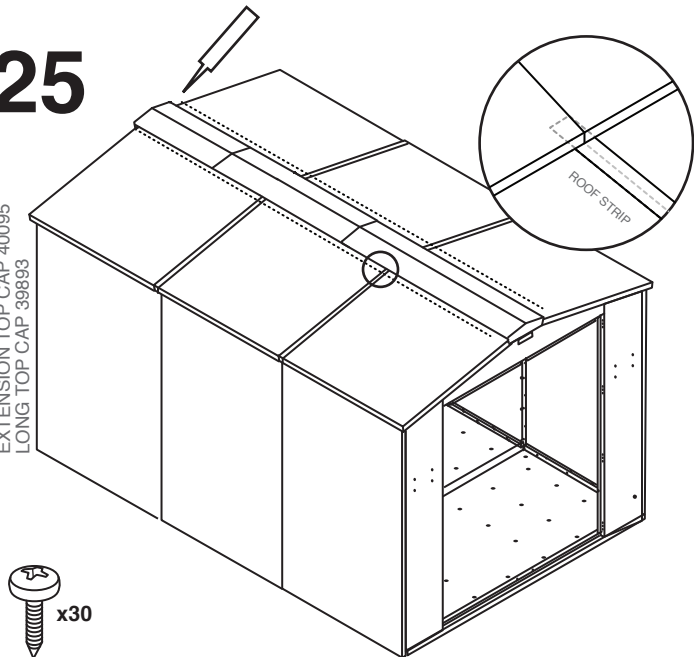


# 26

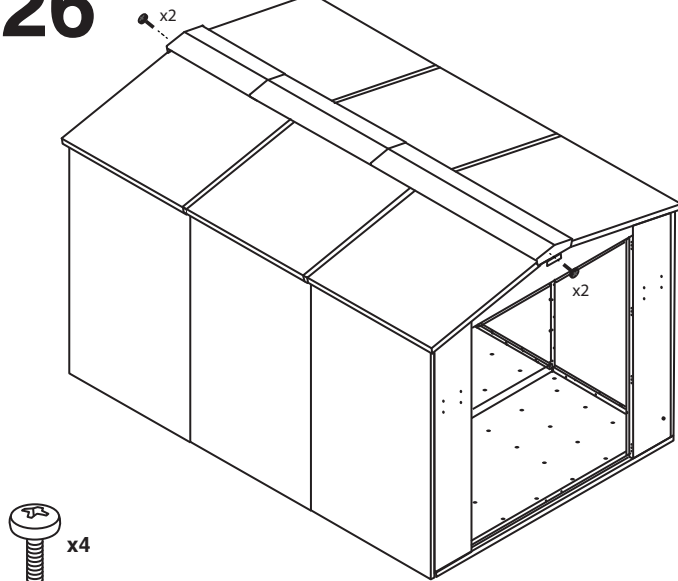


# 27

x24

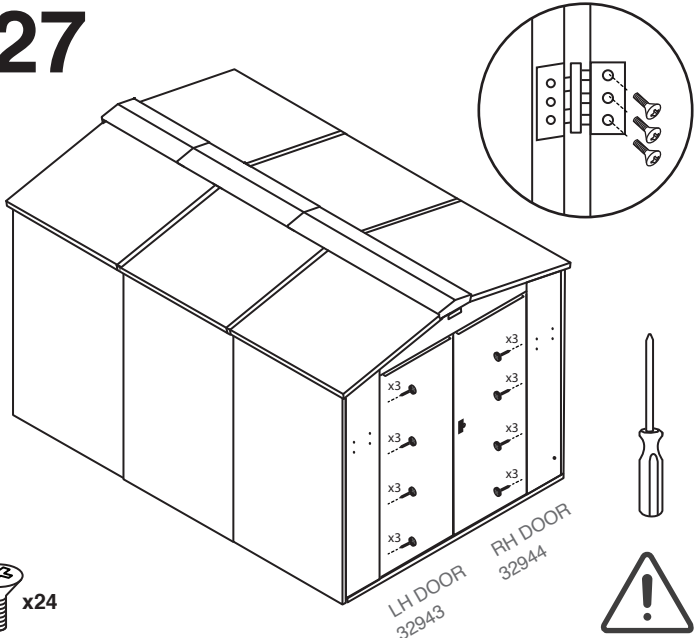

# 28!

LEVEL SHED UNTIL DOORS  
ALIGN USING ZCOMPLAS  
AS SUITABLE

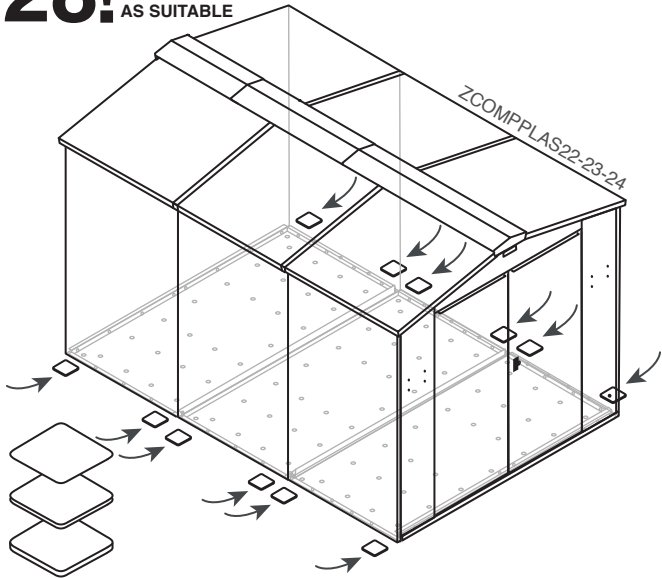

# 29

x12

