

CENTURION BIKE STORE X7

BASE INSTRUCTIONS

Flat and firm base. Recommended: concrete, tarmac or paving flags.
Min. distance from walls/ shrubbery: 1000mm.
Min. base size (WxDxH) 3790mm x 1730mm x 50mm.

LEVELING THE UNIT

Correctly level the constructed unit using the shims (ZCOMPPLAS) provided prior to fixing the unit to the ground. Slide the packing pieces under the corners of the unit base as required until an equal gap has been achieved around the door allowing for its smooth operation and alignment.


It is always recommended to anchor the unit to the ground. Drill through the four holes in each of the base of the unit using 6mm dia masonry drill to a depth of 70mm. Screw in the anchor fixings. (These have a self cutting thread). If not anchoring the unit, fit the self seal plugs **BEFORE BUILDING** to seal the fixing holes from underneath. **Please note product must be bolted down to comply with LPS1175.**

TOOLS REQUIRED







Power driver POSI-DRIV screwdriver, 6mm dia. masonry drill and a 10mm socket or spanner.









Warning: some panels may weigh over 20Kg
Beware of manual handling

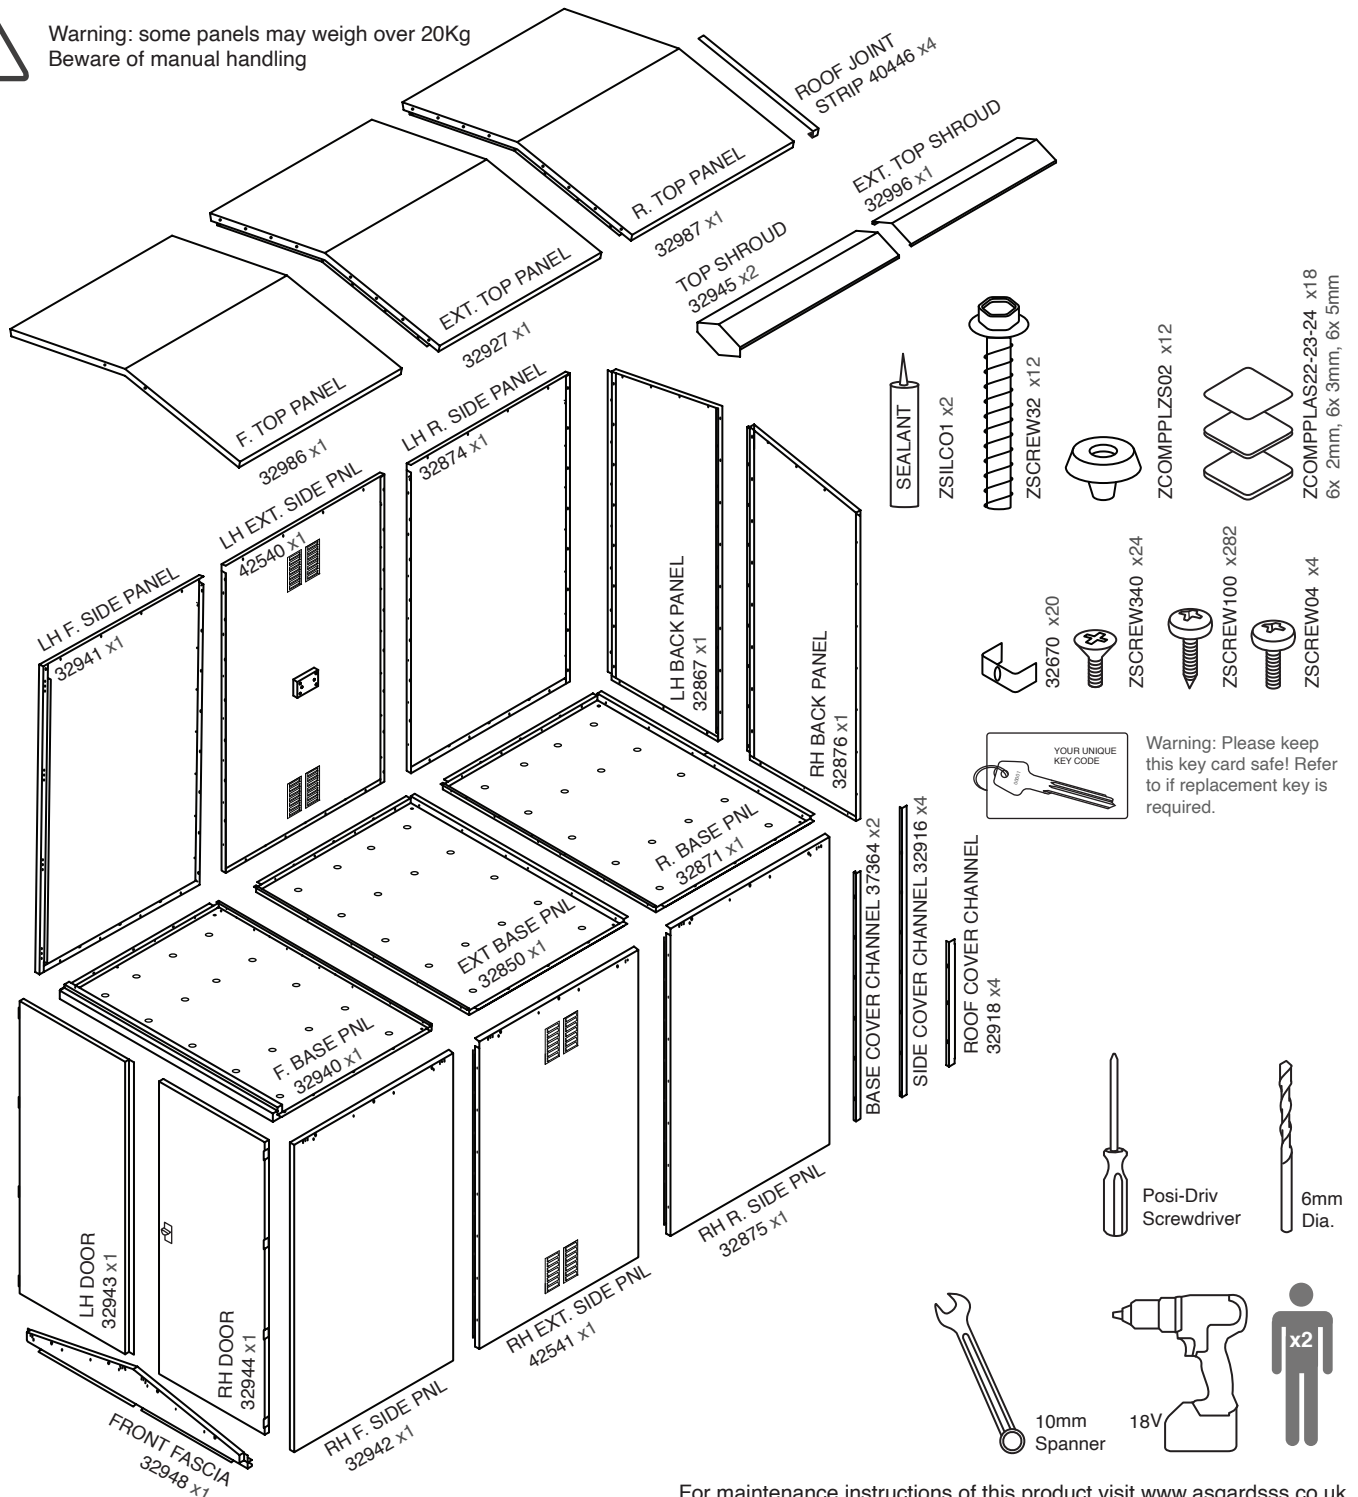

PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE

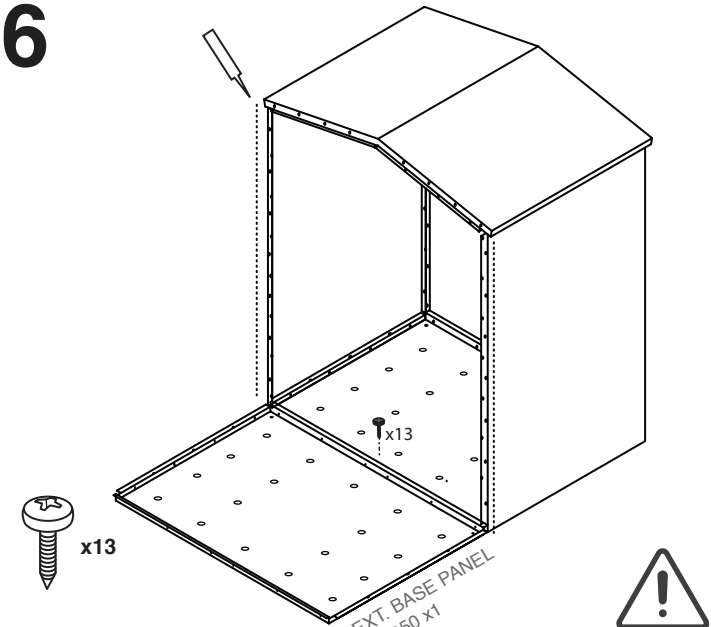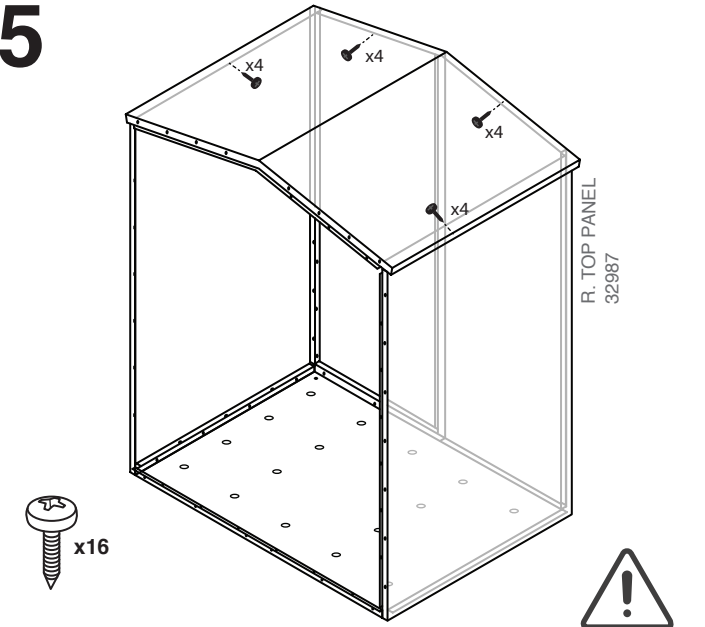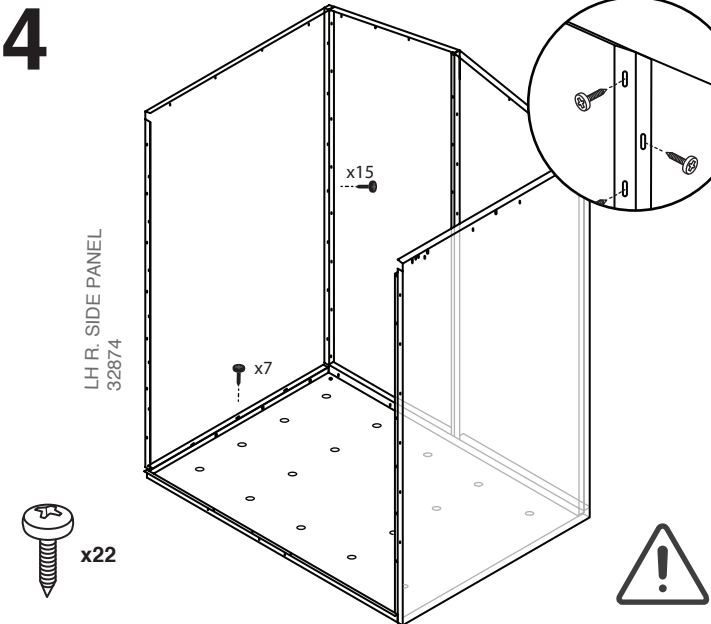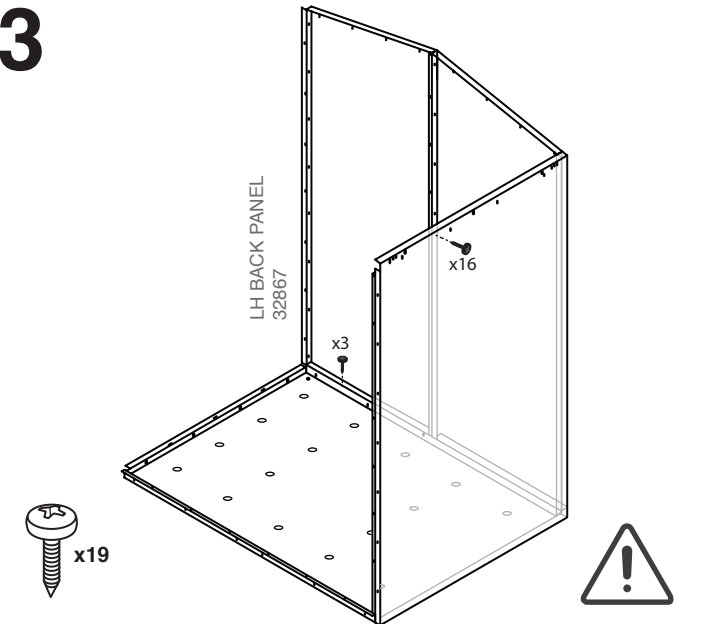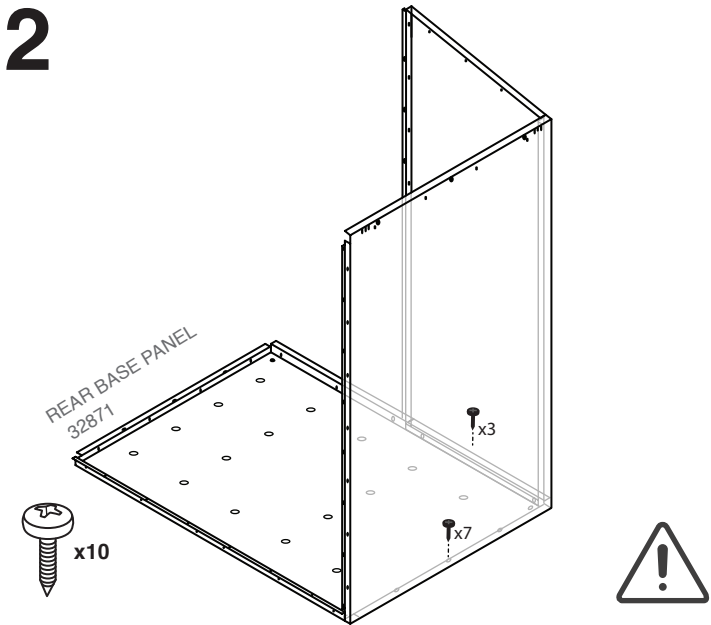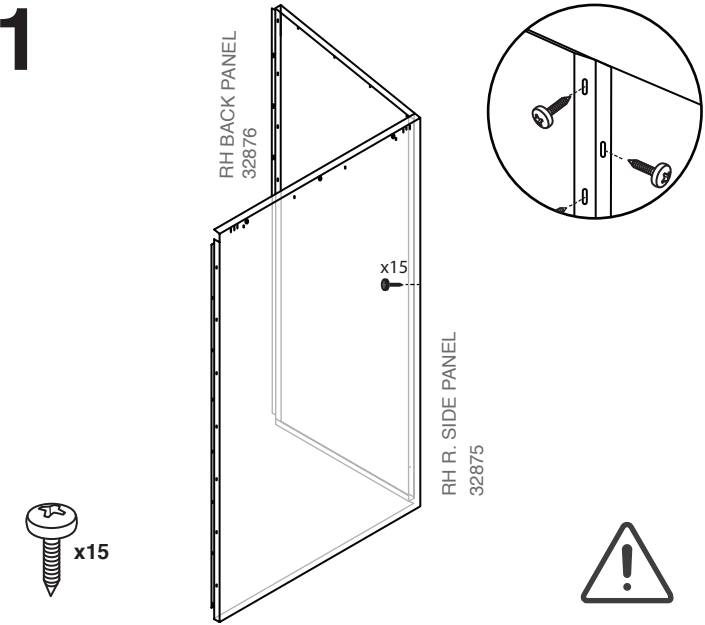

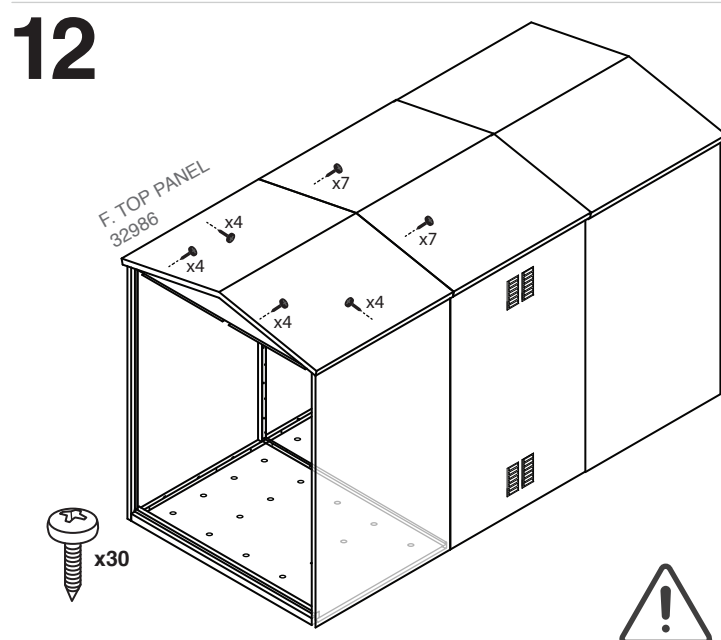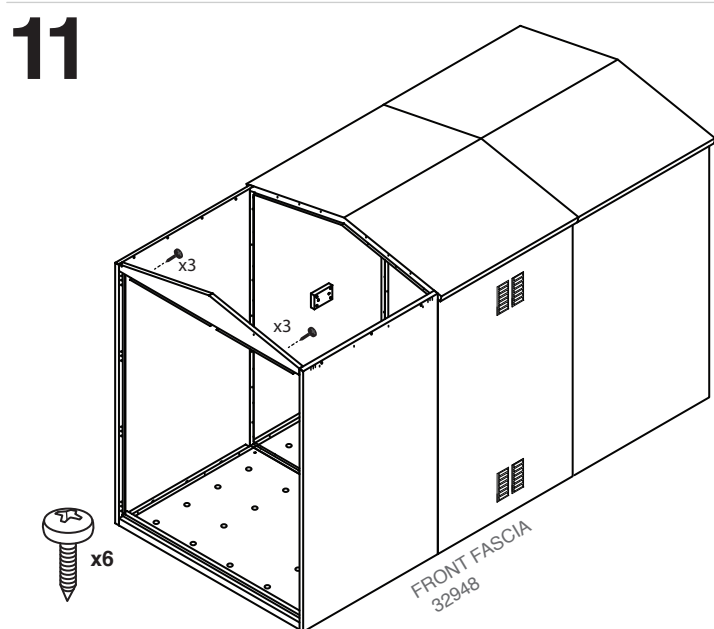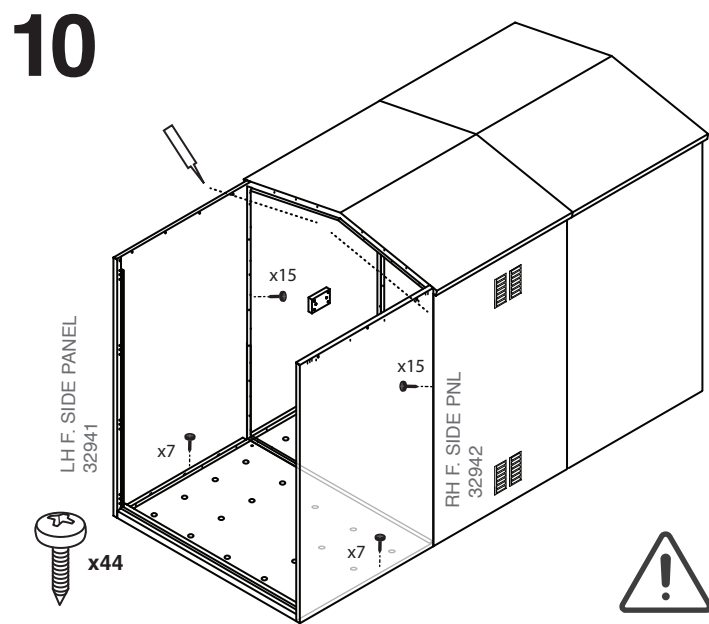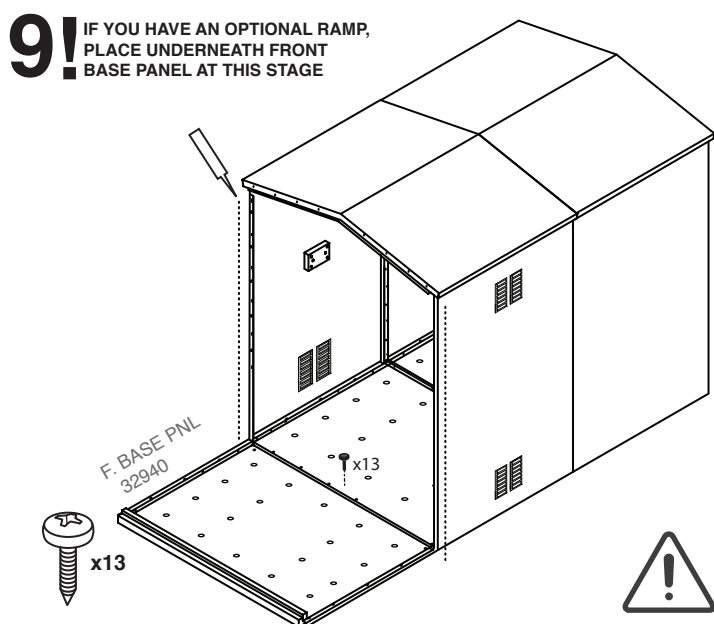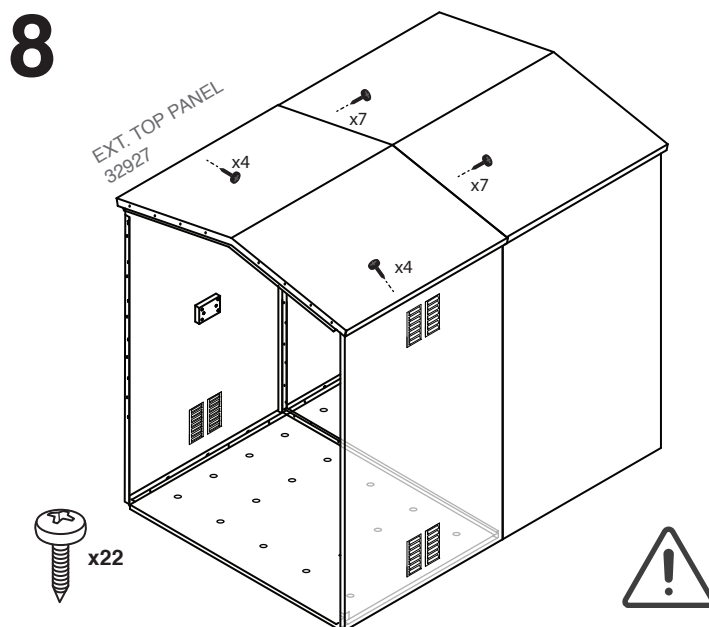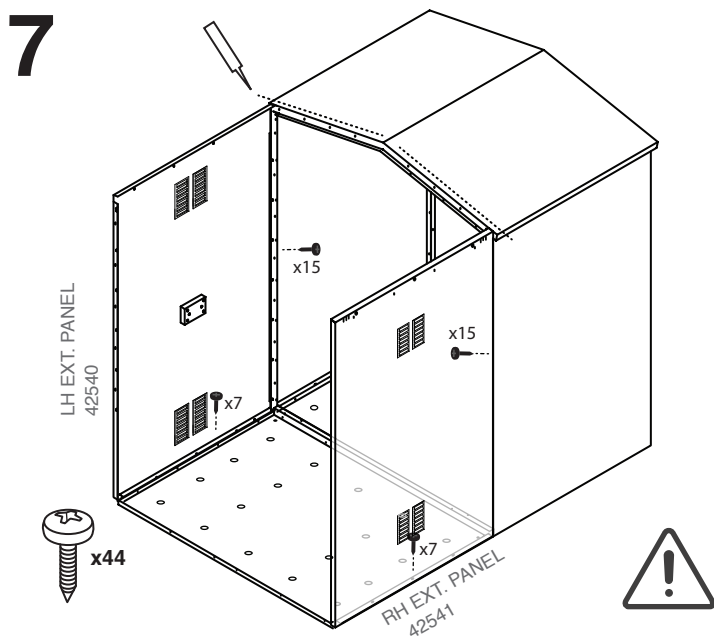

[illegible]

14! NO SCREWS REQUIRED
TOP END OF STRIP TRAPPED
UNDER TOP CAP

1ST TOP SHROUD
32945

EXT. TOP SHROUD
32996

2ND TOP SHROUD
32945

ROOF JOINT STRIP END
40446

ROOF JOINT STRIP 40446
APPLY TO ALL INSIDE EDGES
AND FIT FIRST

x4

x4

x8

15

SHROUDS 32945 & 32996
ROOF JOINT STRIP 40446

x2

x2

x4


SHROUDS
ROOF STRIP

This diagram illustrates the process of attaching shrouds and a roof joint strip to the roof of the unit. It shows a top-down view of the unit's roof structure. Two shrouds, labeled 'SHROUDS 32945 & 32996', are shown being attached to the roof panels. A roof joint strip, labeled 'ROOF JOINT STRIP 40446', is shown being attached to the joint between the roof panels. The diagram includes callouts for the number of each part required: 'x2' for the shrouds and 'x4' for the roof joint strip. A circular inset provides a detailed view of the shroud and roof strip assembly, showing the 'SHROUDS' and 'ROOF STRIP' labels. A screwdriver and a screw are shown as tools for this step.

16

Diagram 16 illustrates the step of attaching the top of the cabinet. A large screwdriver icon is shown on the left, labeled 'x20'. A circular inset on the right shows a close-up of a corner bracket labeled '32670' being attached to the top edge of the cabinet frame with a screw.

**17 ! REMOVE SCREWS WHICH ALIGN WITH THE COVER CHANNELS.
ALIGN AND PLACE SCREWS BACK**

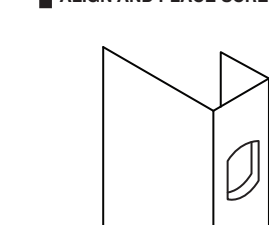

SIDE COVER CHANNEL 32916
ROOF COVER CHANNEL 32918
BASE COVER CHANNEL 37364

18! LEVEL SHED UNTIL DOORS
ALIGN USING ZCOMPPLAS
AS SUITABLE

ZCOMPPLAS22-23-24

19

