

MOTORCYCLE PLUS 1



BASE INSTRUCTIONS

Flat and firm base. Recommended: concrete, tarmac or paving flags.
Min. distance from walls/ shrubbery: 1000mm.
Min. base size (WxDxH) 2410mm x 4940mm x 50mm.


LEVELING THE UNIT

Correctly level the constructed unit using the shims (ZCOMPPLAS) provided prior to fixing the unit to the ground. Slide the packing pieces under the corners of the unit base as required until an equal gap has been achieved around the door allowing for its smooth operation and alignment.

It is always recommended to anchor down the unit to the ground. Drill through the four holes in each of the bases of the unit using 6mm dia masonry drill to a depth of 70mm. Screw in the anchor fixings. (These have a self cutting thread). If not anchoring the unit, fit the self seal plugs **BEFORE BUILDING** to block the fixing holes from underneath. **Please note, product must be bolted down to comply with LPS1175**

TOOLS REQUIRED


Power driver POSI-DRIV screwdriver, 6mm dia. masonry drill and a 10mm socket or spanner.

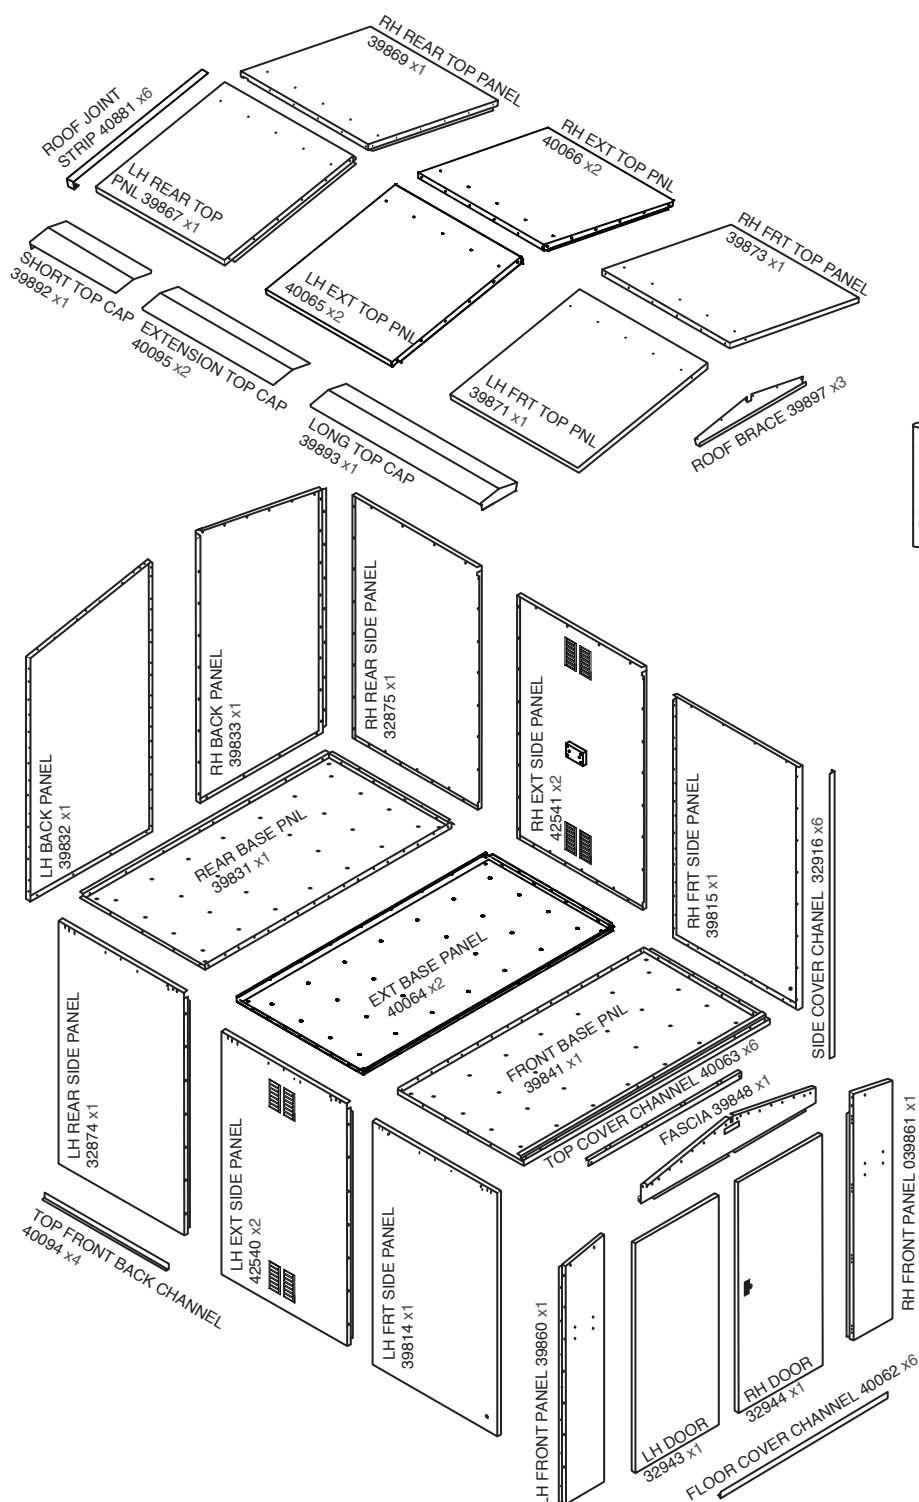

Warning: some panels may weigh over 20Kg. Beware of manual handling



SEALANT
ZSILCOL1 x3



ZSCREW32 x16



ZCOMPPLZS02 x16



ZCOMPPLAS22-23-24 x24
8x 2mm, 8x 3mm, 8x 5mm




ZSCREW340 x24



ZSCREW100 x515



ZSCREW04 x4




Warning: Please keep this key card safe! Refer to if replacement key is required.




Posi-Drive
Screwdriver



6mm
Dia.



10mm
Spanner

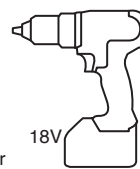

18V




x2


For maintenance instructions of this product visit www.asgardsss.co.uk

PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE


1

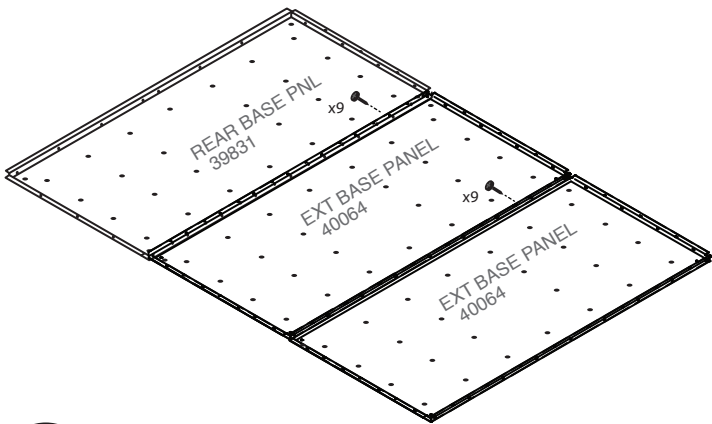


2! IF YOU HAVE AN OPTIONAL RAMP,
PLACE UNDERNEATH FRONT
BASE PANEL AT THIS STAGE

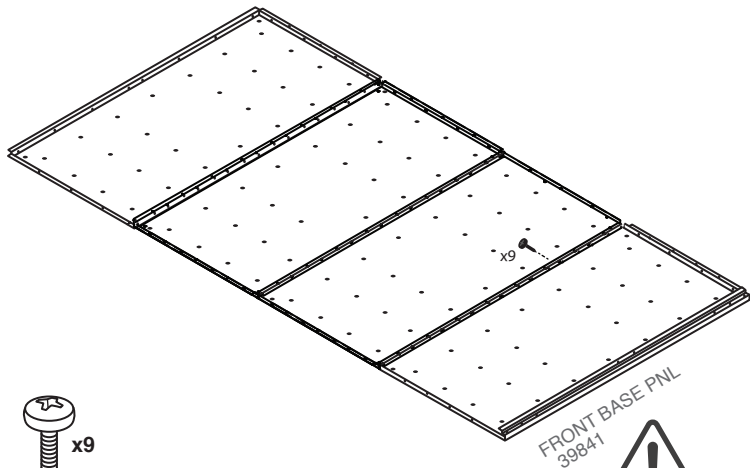


3

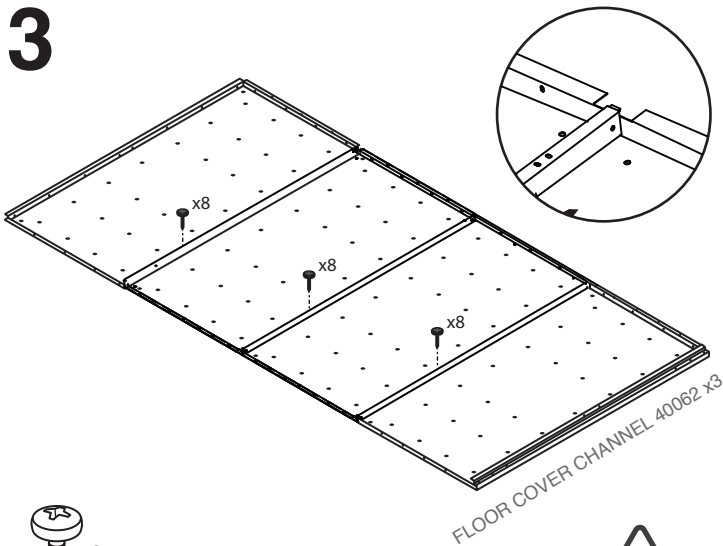


4

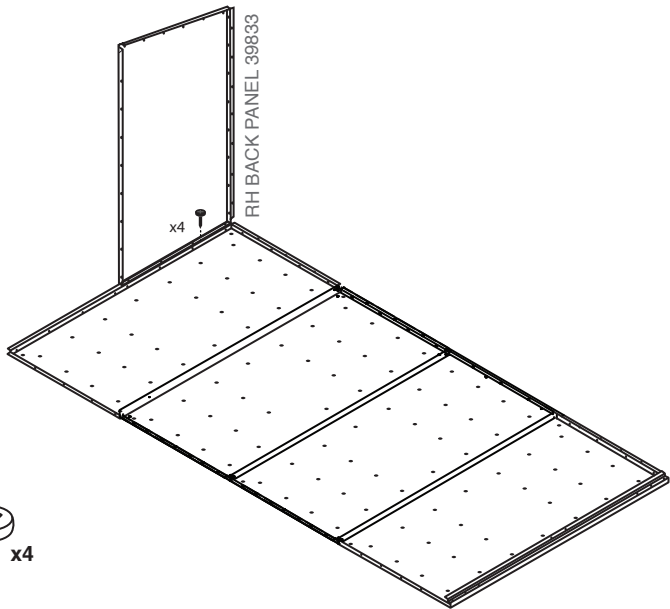







5

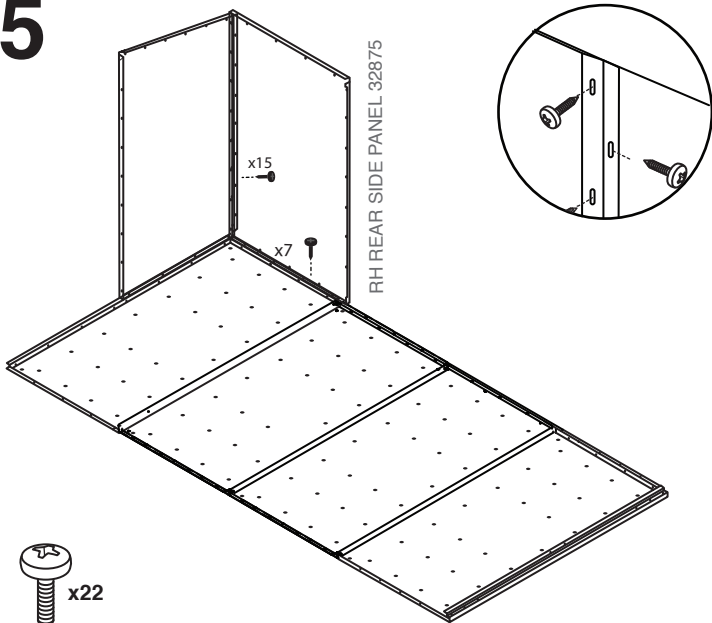

6

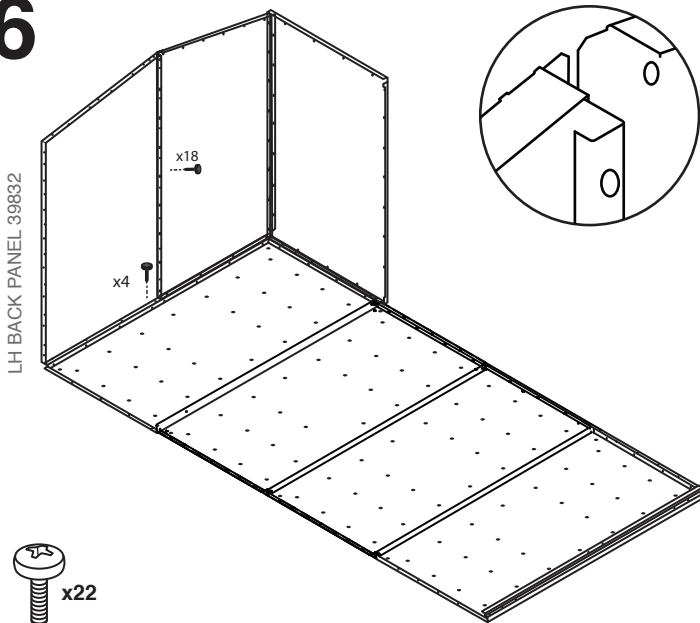

PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE

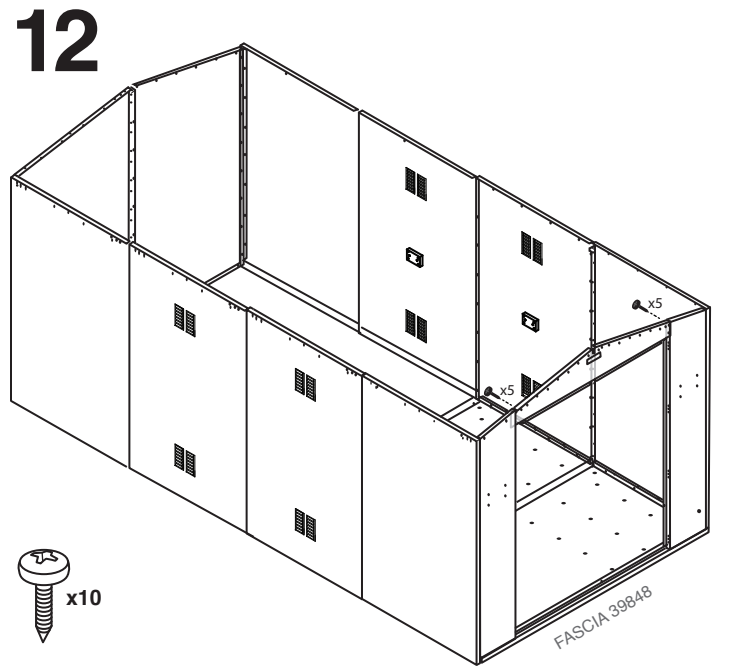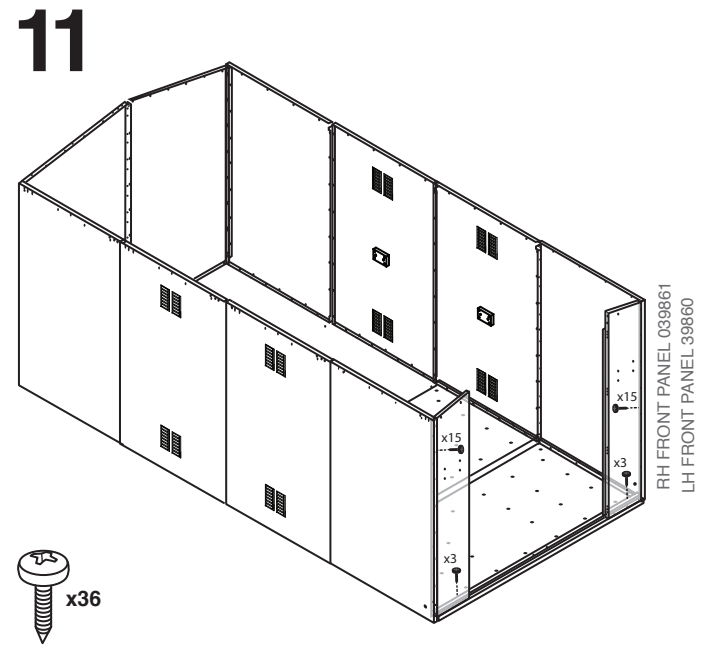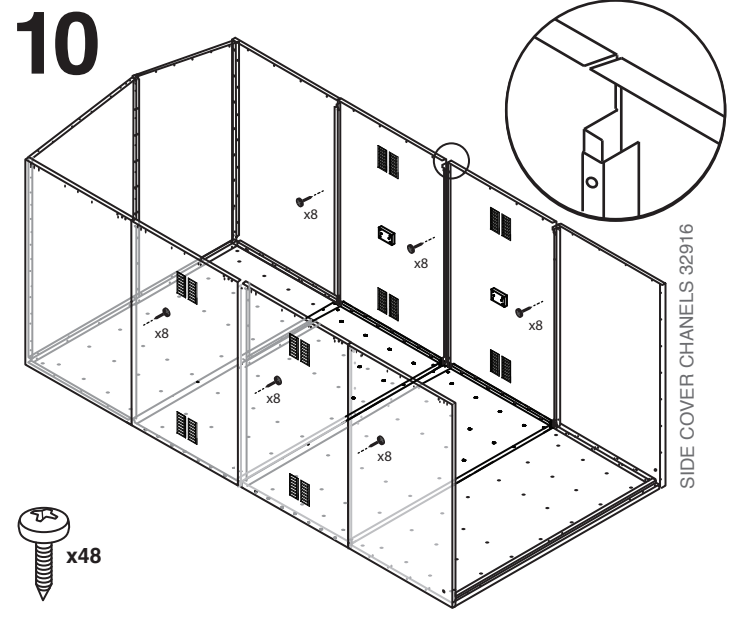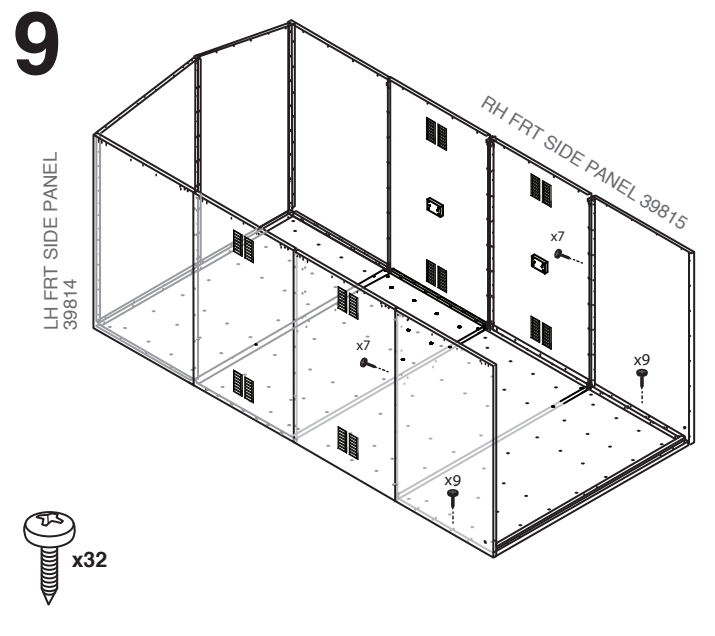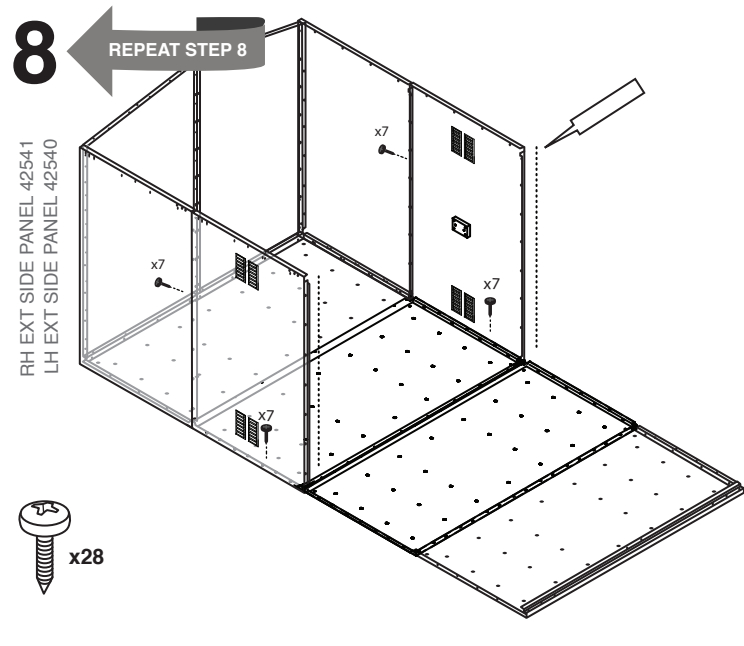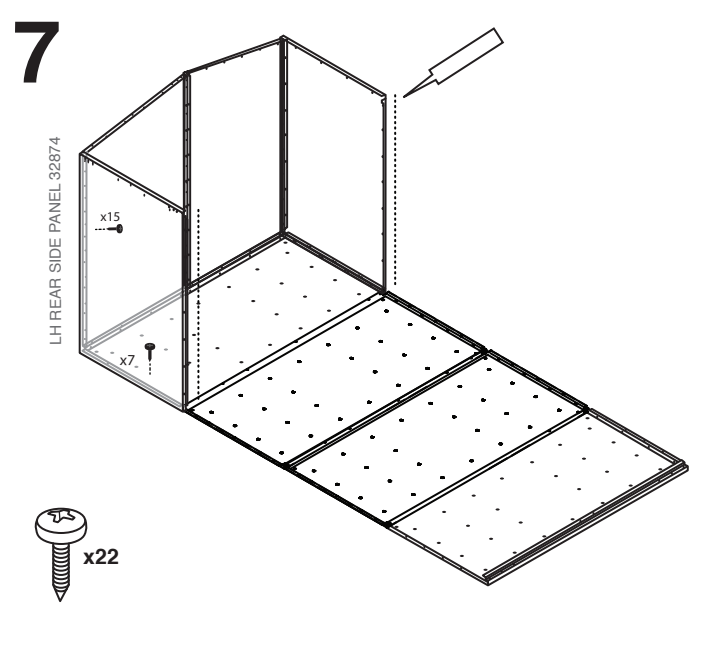

13



15



16



17




18




PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE


19

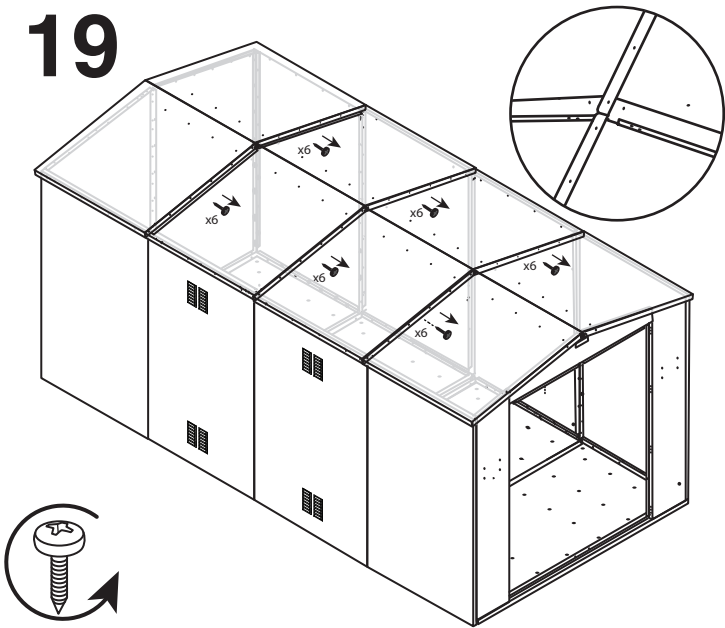


20

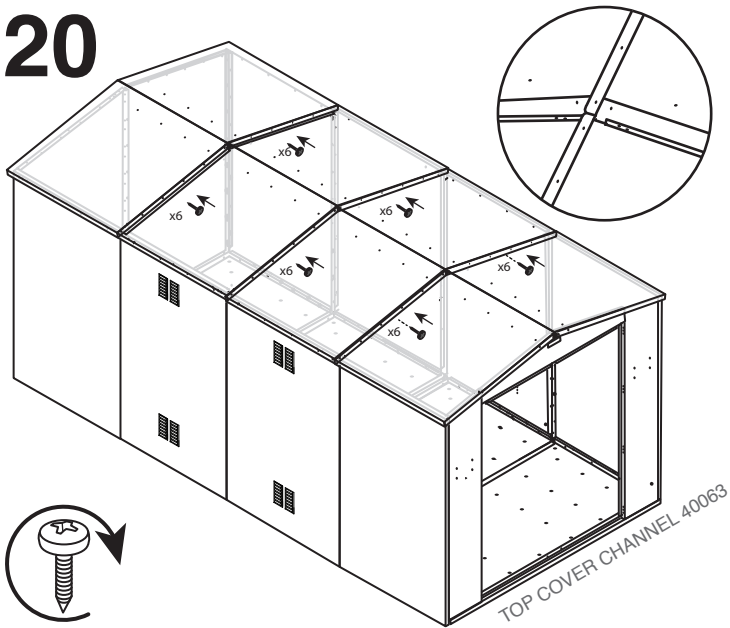


21

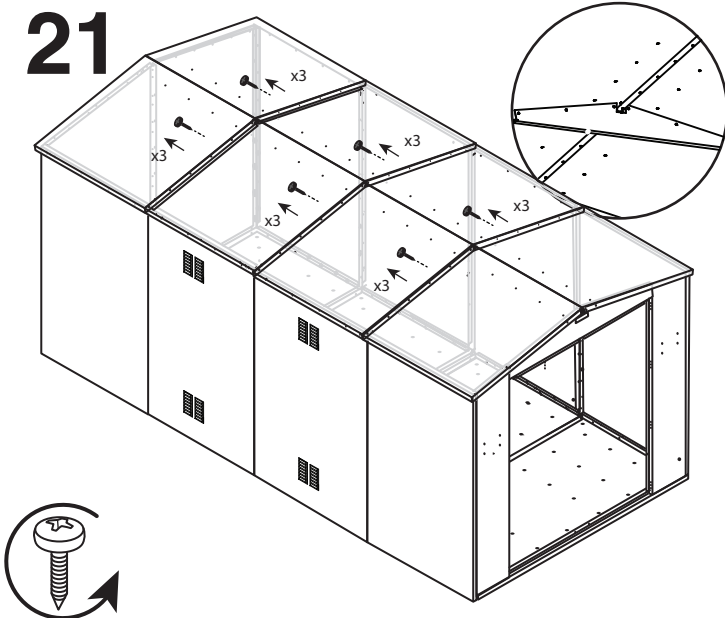


22

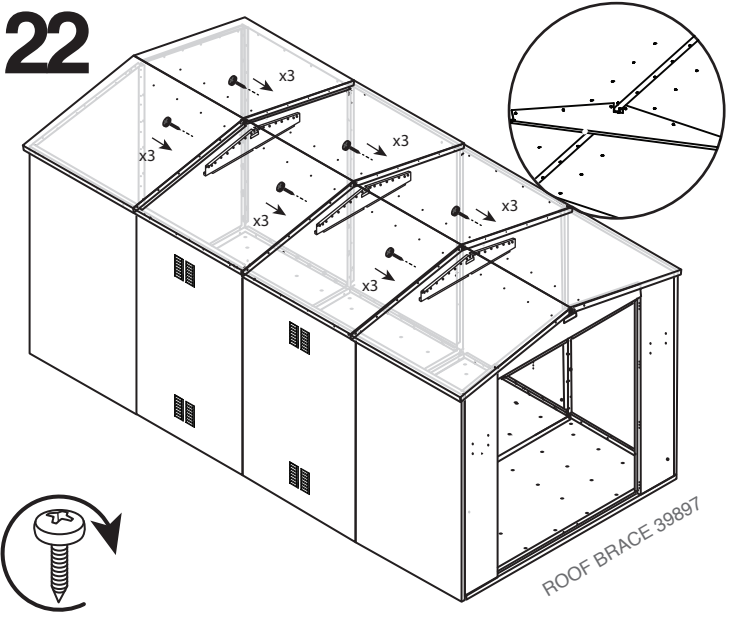


23

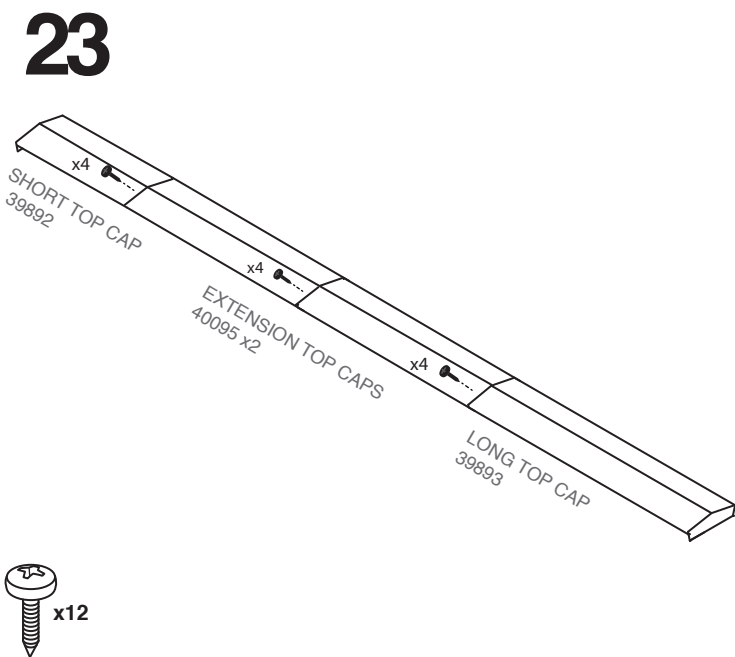


24! NO SCREWS REQUIRED
TOP END OF STRIP TRAPPED
UNDER TOP CAP

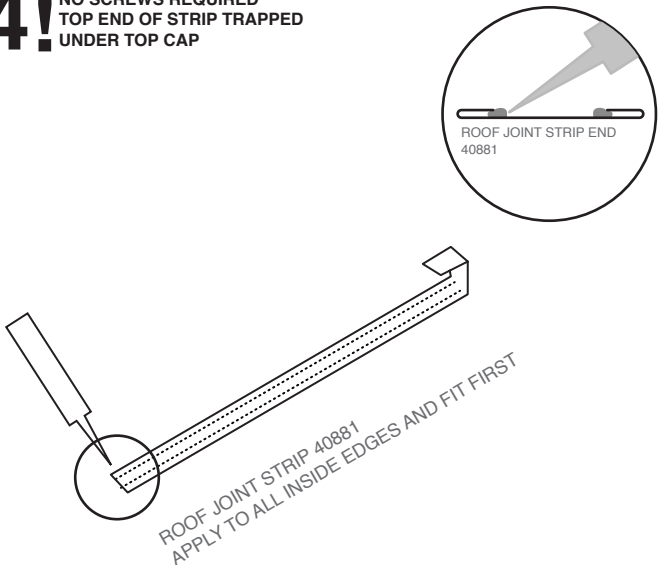


25

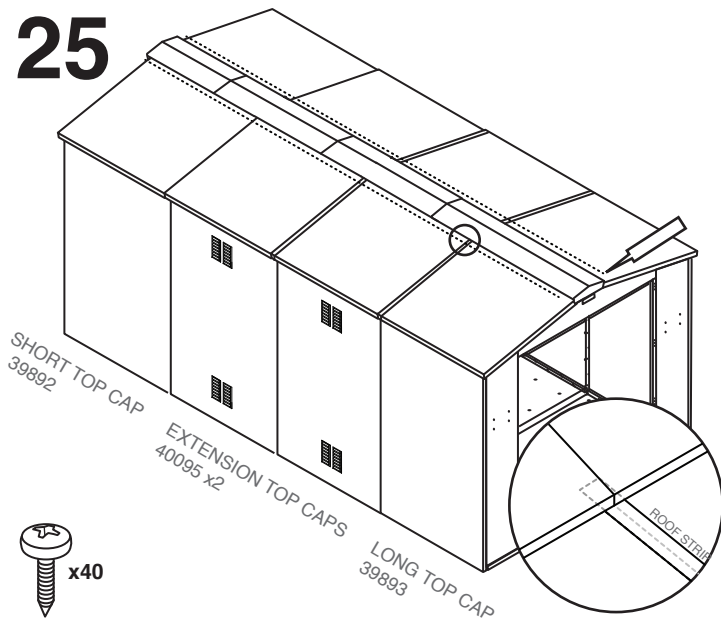


26

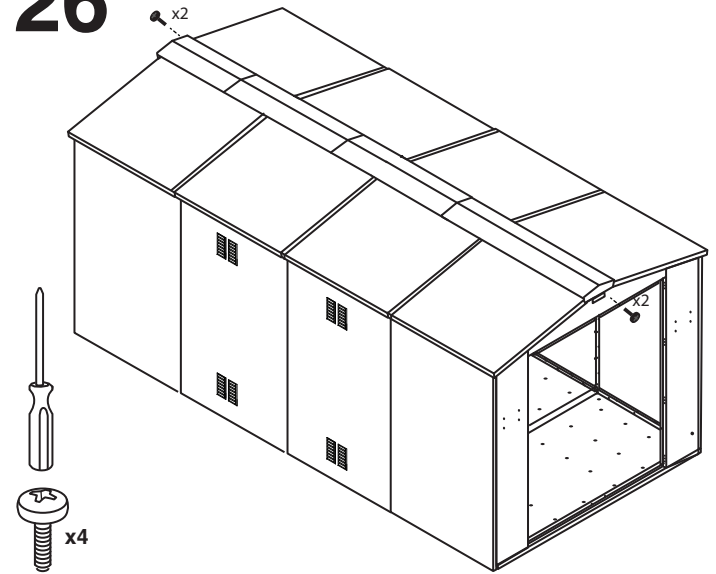

27

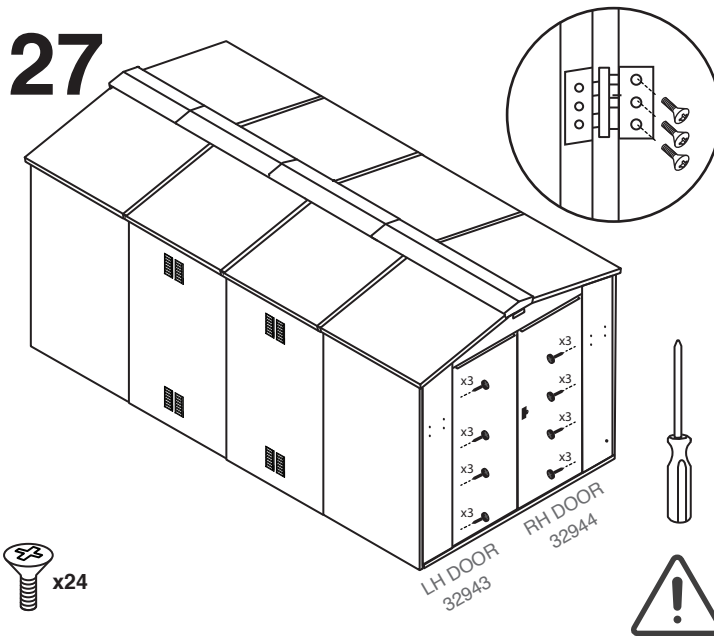

28!

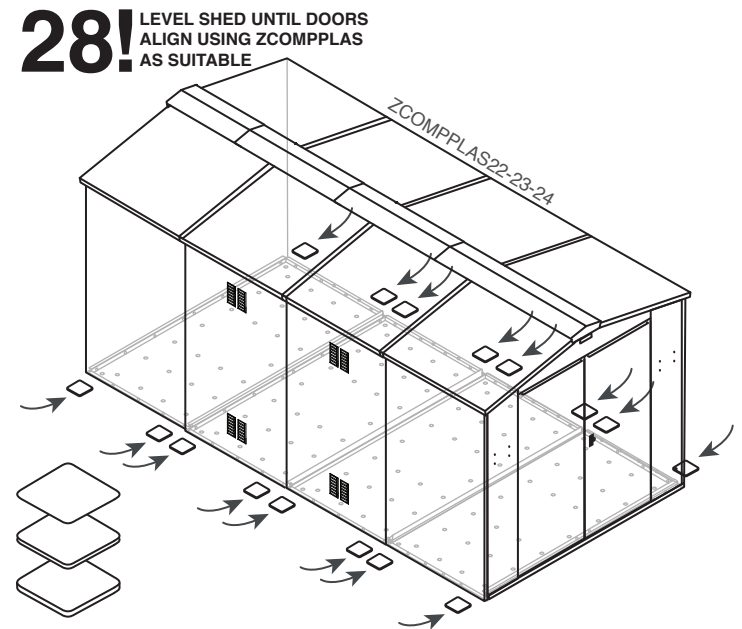

29

