

CENTURION P3 GARDEN SHED - ELECTRIC READY



BASE INSTRUCTIONS

Flat and firm base. Recommended: concrete, tarmac or paving flags.
Min. distance from walls/ shrubbery: 1000mm.
Min. base size (WxDxH) 5916mm x 1730mm x 50mm.

LEVELING THE UNIT

Correctly level the constructed unit using the shims (ZCOMPPLAS) provided prior to fixing the unit to the ground. Slide the packing pieces under the corners of the unit base as required until an equal gap has been achieved around the door allowing for its smooth operation and alignment.


It is always recommended to anchor the unit to the ground. Drill through the four holes in each of the base of the unit using 6mm dia masonry drill to a depth of 70mm. Screw in the anchor fixings. (These have a self cutting thread). If not anchoring the unit, fit the self seal plugs **BEFORE BUILDING** to seal the fixing holes from underneath. **Please note product must be bolted down to comply with LPS1175.**

TOOLS REQUIRED







Power driver POSI-DRIV screwdriver, 6mm dia. masonry drill and a 10mm socket or spanner.




Warning: some panels may weigh over 20Kg
Beware of manual handling

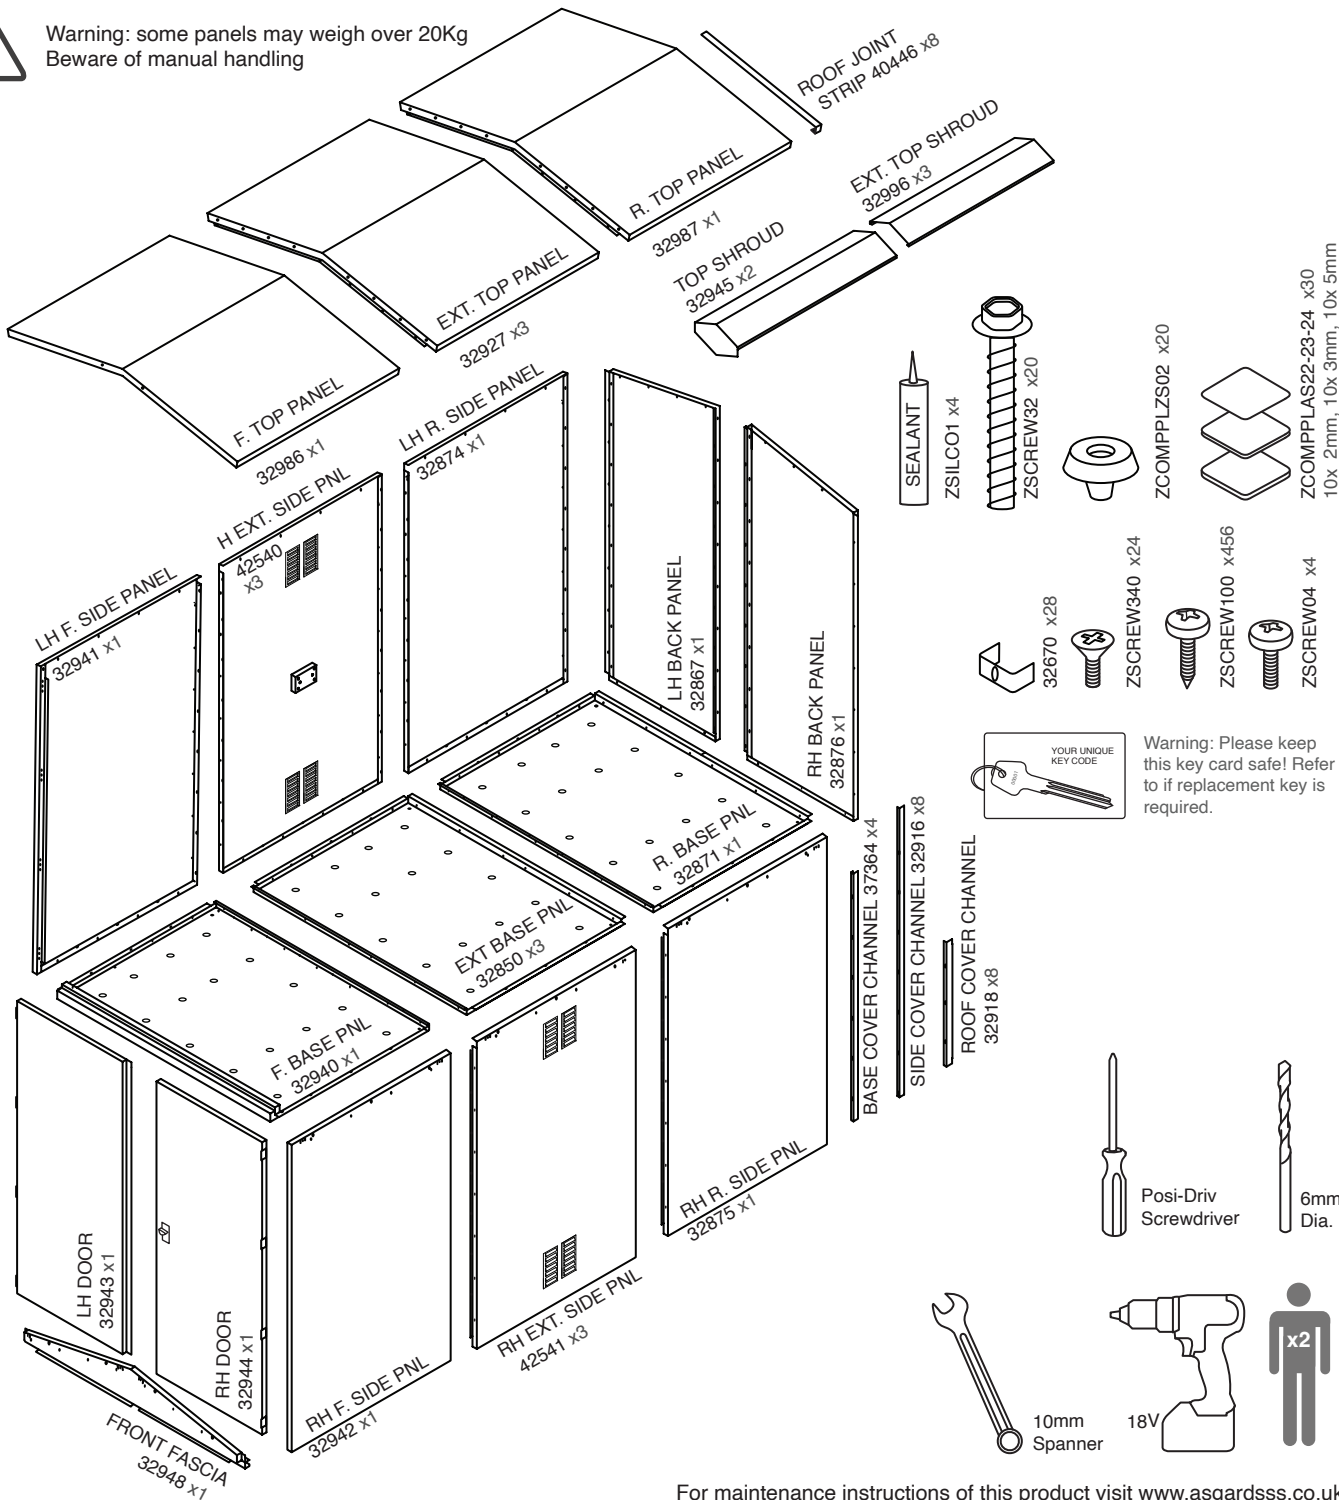

PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE

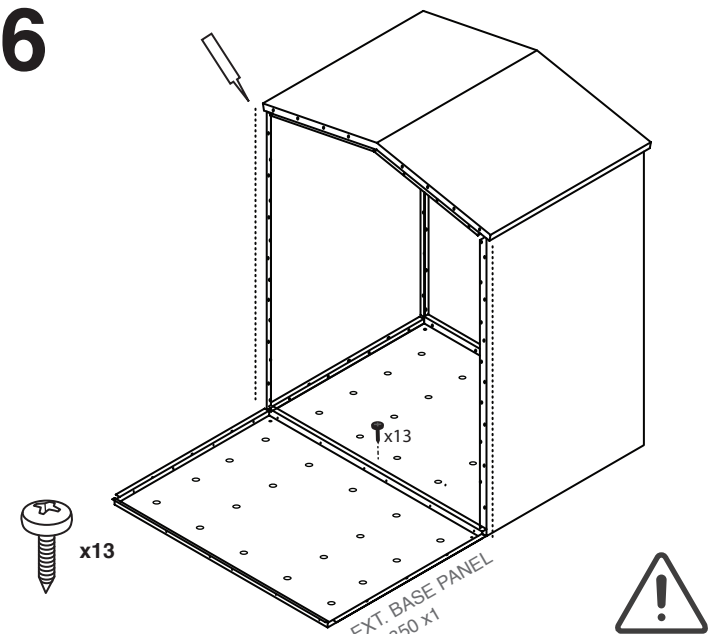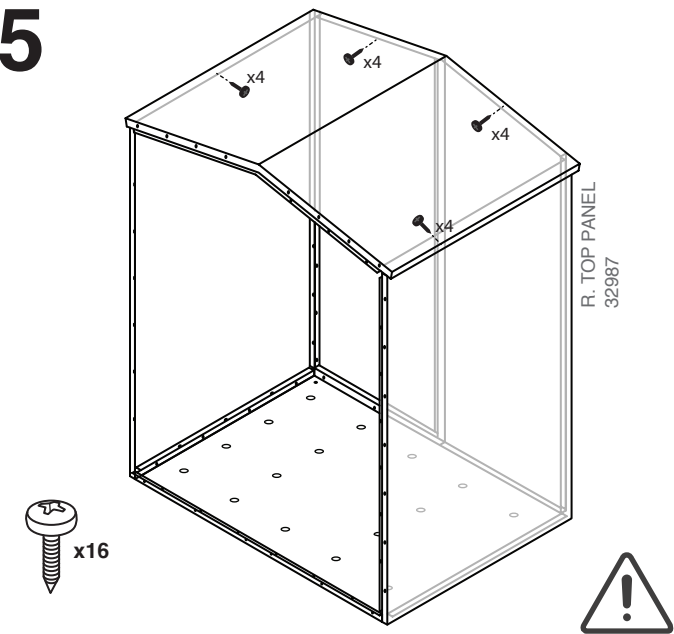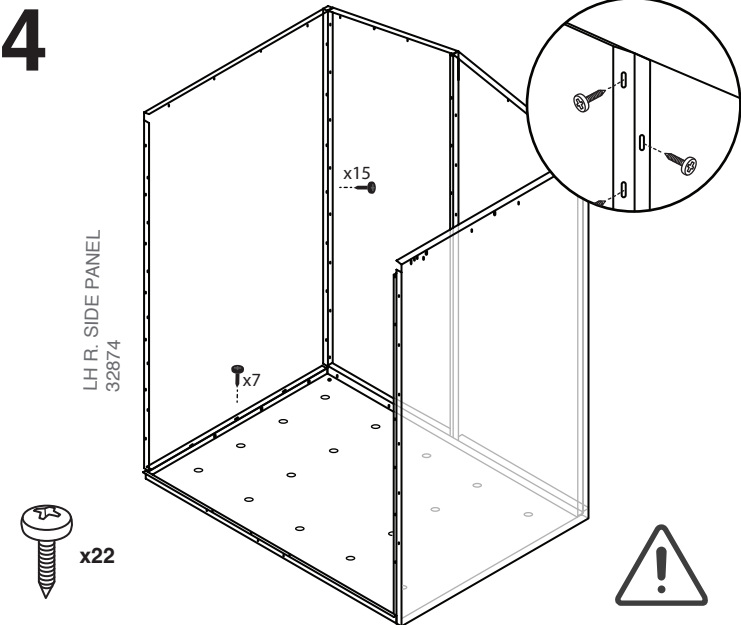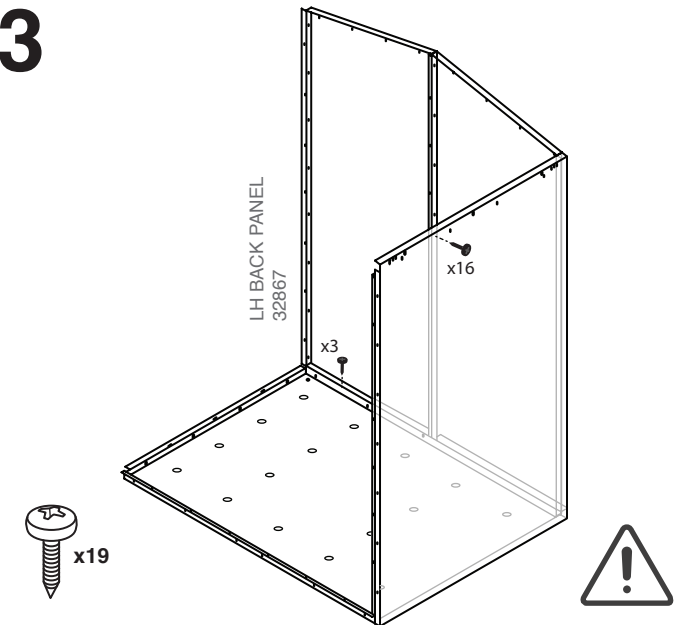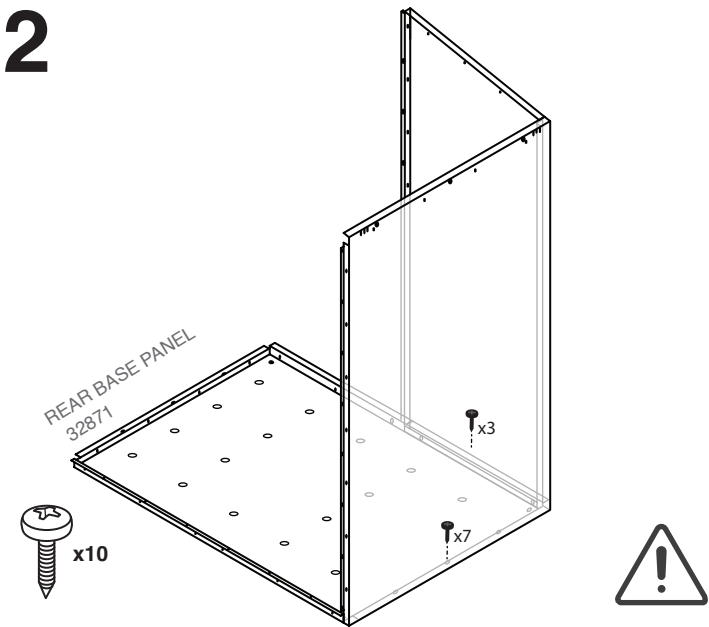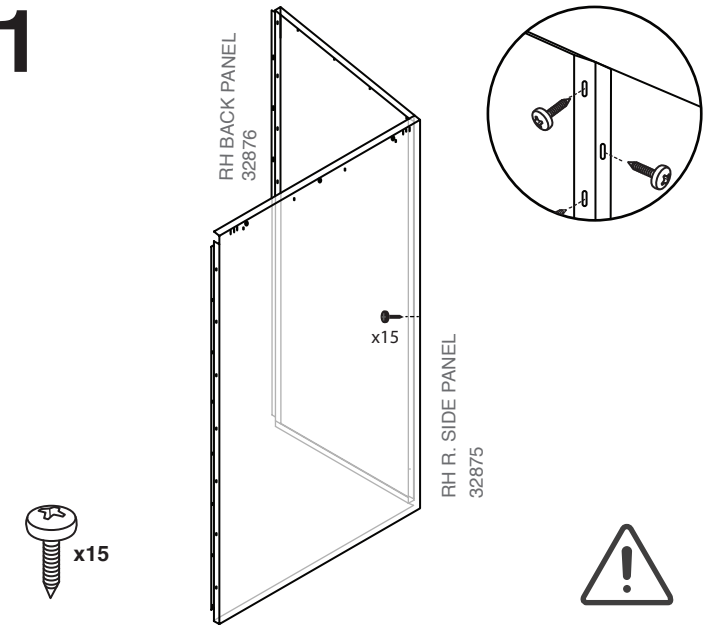


7

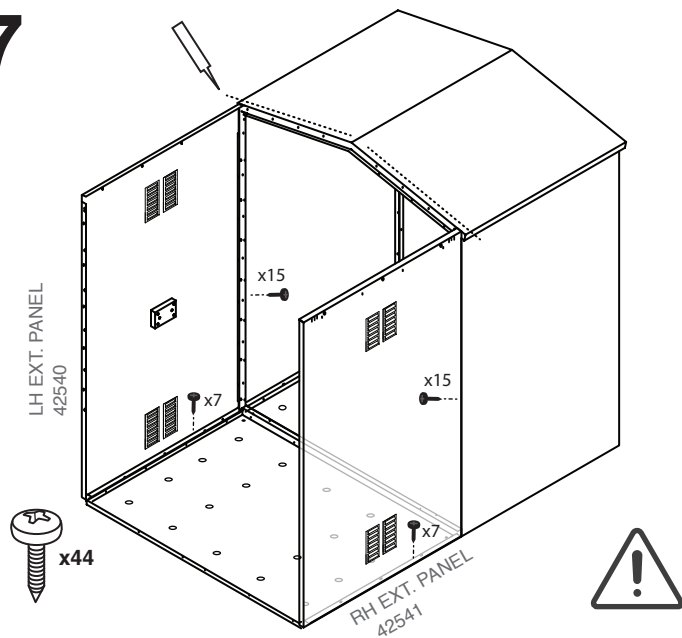


8

REPEAT 6-8 x3

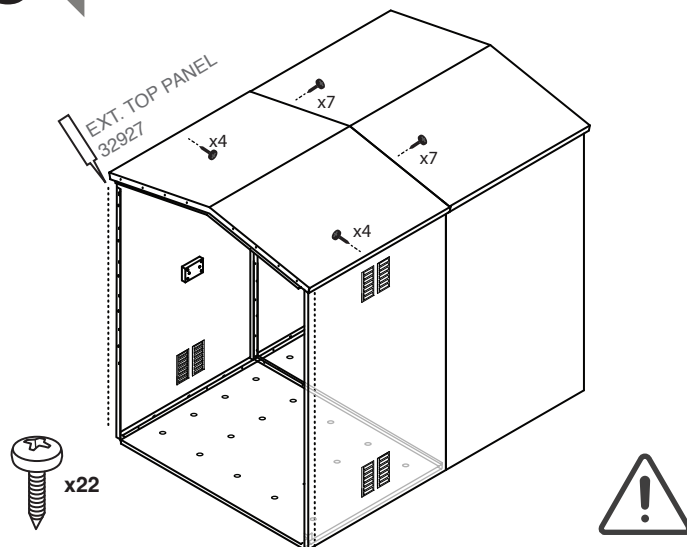


9


IF YOU HAVE AN OPTIONAL RAMP, PLACE UNDERNEATH FRONT BASE PANEL AT THIS STAGE

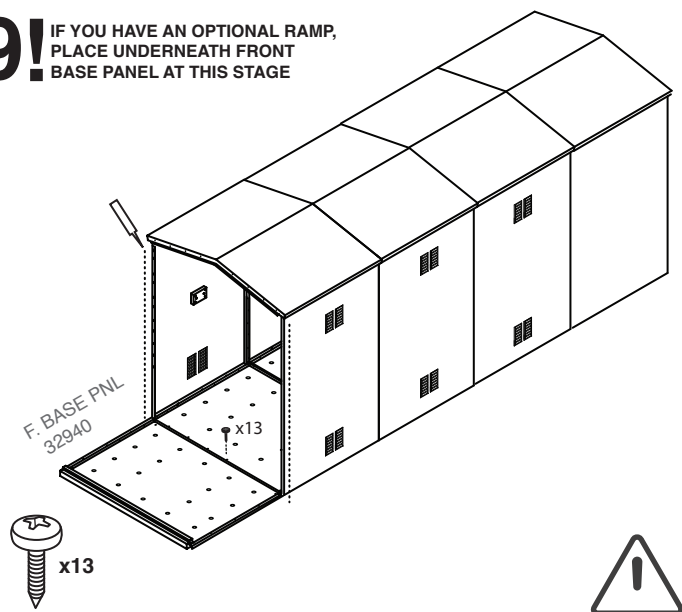


10

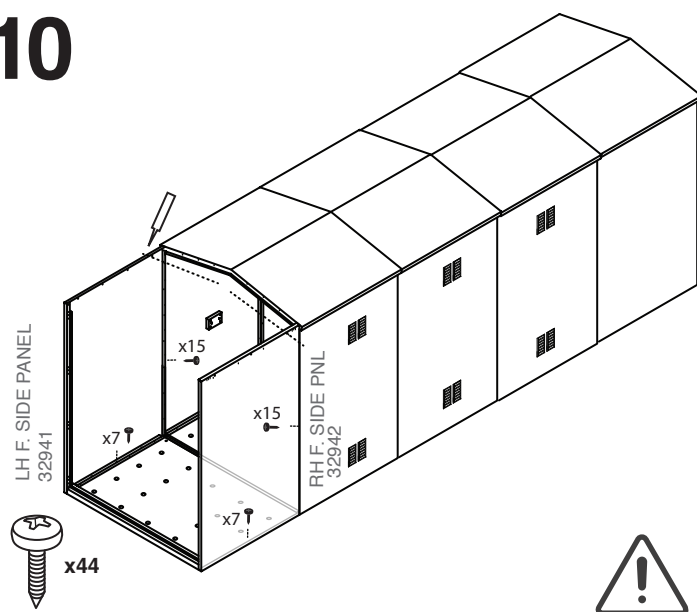

11

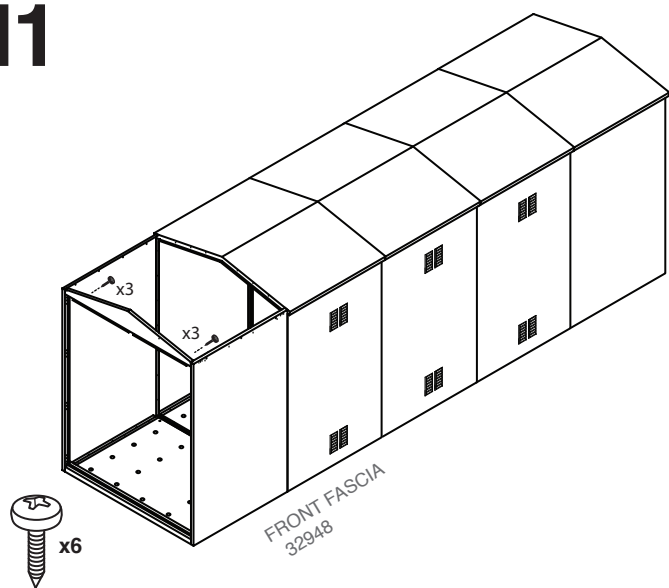

12

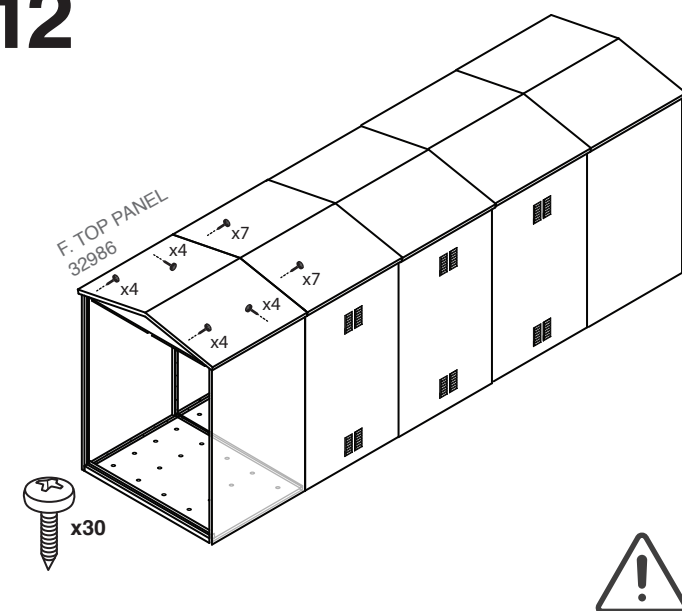

13

LH DOOR
32943

x3
x3
x3
x3
x3

RH DOOR
32944

x3
x3
x3
x3
x3

x24

Warning symbol: exclamation mark inside a triangle.

14! NO SCREWS REQUIRED
TOP END OF STRIP TRAPPED
UNDER TOP CAP

ROOF JOINT STRIP END
40446

x4 x4 x4

TOP SHROUD
32945 x2

EXT. TOP SHROUD
32996 x3

ROOF JOINT STRIP 40446
APPLY TO ALL INSIDE EDGES
AND FIT FIRST

x16

15

SHROUDS 32996 & 32945
ROOF JOINT STRIP 40446

x2

x4

ROOF STRIP

16


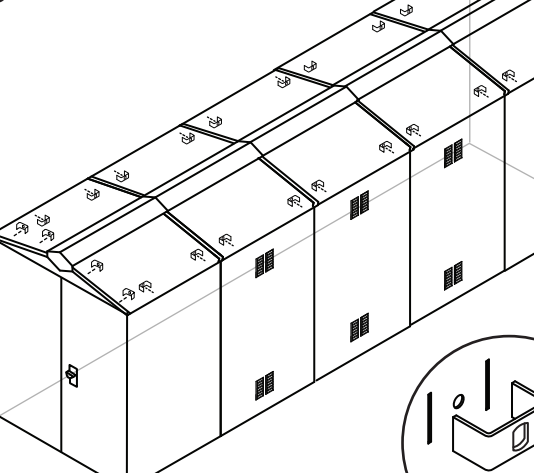


Diagram 16 illustrates the assembly of the side panel. The diagram shows a perspective view of a long, narrow cabinet with multiple compartments. A side panel is being attached to the right side. A circular inset shows a close-up of a corner bracket (part 32670) being secured with a screw (part x28) to the side panel.

17 ! REMOVE SCREWS WHICH ALIGN WITH THE COVER CHANNELS.
ALIGN AND PLACE SCREWS BACK

SIDE COVER CHANNEL 32916
ROOF COVER CHANNEL 32918
BASE COVER CHANNEL 37364

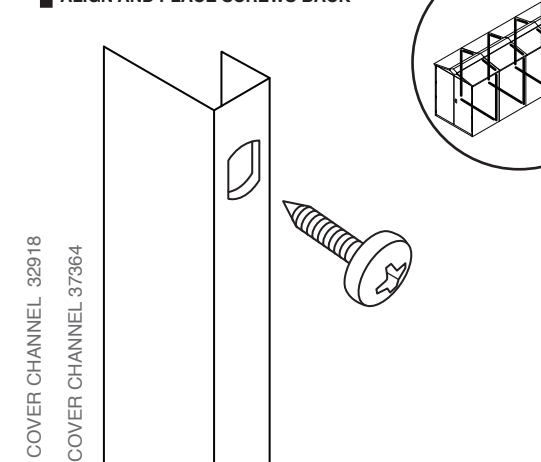

The diagram illustrates the removal of screws from the side, roof, and base cover channels. A side view of the channels shows a screw being removed from the side channel. A circular inset shows the roof and base channels with screws being removed.

18!

LEVEL SHED UNTIL DOORS
ALIGN USING ZCOMPLAS
AS SUITABLE

This diagram illustrates the final step of leveling the shed. It shows the shed's frame with the roof panels partially installed. Arrows indicate the placement of ZCOMPLAS leveling blocks at the base of the shed. The text 'LEVEL SHED UNTIL DOORS ALIGN USING ZCOMPLAS AS SUITABLE' is written above the shed. The label 'ZCOMPLAS22-23-24' is written vertically on the right side of the shed.

19

